



**TRINCIA  
BROYEUR  
SHREDDER  
HÄCKSLER  
DESBROZADORA  
ИЗМЕЛЬЧИТЕЛЬ**

**FALC**<sup>®</sup>

**AGILA**

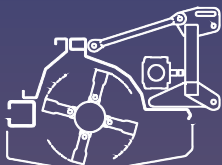

**UNIKA  
UNIKA SP.**

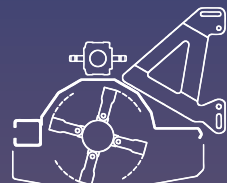

**FALC**<sup>®</sup>





SOLO POSTERIORE



NUR HINTER



SEULEMENT ARRIERE



SOLAMENTE POSTERIOR




ONLY REAR



ТОЛЬКО ЗАДНИЙ

AGILA								
		HP	A mm.	B mm.	A inches	B inches	KG	
1600	50 - 100	1581	1822	62,24	71,73	660	1455	32
1800	50 - 100	1761	2002	69,33	78,82	706	1556	36
2100	50 - 100	2121	2362	83,50	92,99	750	1653	44
2300	50 - 120	2305	2546	90,75	100,24	910	2006	48
2500	50 - 120	2485	2726	97,83	107,32	965	2127	52
2700	50 - 120	2665	2906	104,92	114,41	1020	2249	56

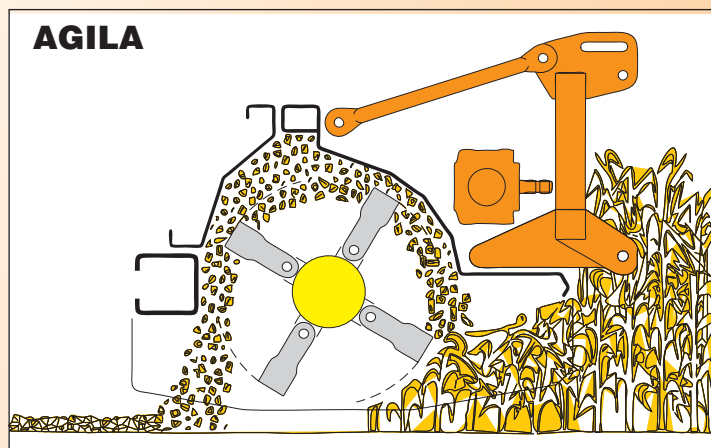

Attacco con spostamento idraulico



Anschluß mit hydraulik Verschub



Attelage avec déplacement hydraulique



Enganche con desplazamiento hidráulico




Linking with hydraulic shifting



С гидравлическим смещением





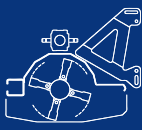

	ANTERIORE O POSTERIORE		VORDER ODER HINTER
	ANTERIEUR OU ARRIERE		ANTERIOR O POSTERIOR
	FRONT OR REAR		ПЕРЕДНИЙ ИЛИ ЗАДНИЙ

UNIKA								
		HP	A mm.	B mm.	A inches	B inches	KG	
1600	50 - 100	1581	1822	62,24	71,73	656	1446	32
1800	50 - 100	1761	2002	69,33	78,82	688	1517	36
2100	50 - 100	2121	2362	83,50	92,99	751	1656	44
2300	50 - 120	2305	2546	90,75	100,24	887	1955	48
2500	50 - 120	2485	2726	97,83	107,32	926	2041	52
2700	50 - 120	2665	2906	104,92	114,41	968	2134	56



4



5

PTO 1000

PTO 540

Invertendo la posizione delle pulegge si passa da PTO 1000 a PTO 540

Inversant la position des poulies on passe de PDF 1000 à PDF 540

Inverting the position of the pulleys you change from PTO 1000 to PTO 540


Um die Umdrehung von 1000 bis 540 zu wechseln, muss man die Riemenscheiben vertauschen

Invertiendo la posición de las poleas, se pasa de TDF 1000 a TDF 540


Инверсия положение шкивов переходе от BOM 1000 BOM 540



6

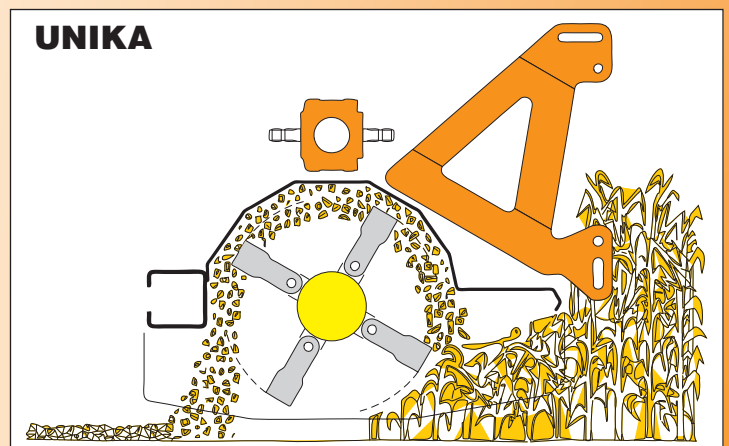



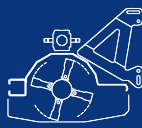

ANTERIORE O POSTERIORE



ANTERIEUR OU ARRIERE



FRONT OR REAR



VORDER ODER HINTER



ANTERIOR O POSTERIOR



ПЕРЕДНИЙ ИЛИ ЗАДНИЙ

UNIKA SP. SPOSTABILE								
		HP	A mm.	B mm.	A inches	B inches	KG	
2300	50 - 120	2305	2546	90,75	100,24	840	1851	48
2500	50 - 120	2485	2726	97,83	107,32	880	1940	52
2700	50 - 120	2665	2906	104,92	114,41	920	2028	56
3000	50 - 120	3025	3296	119,09	129,76	980	2160	64



PTO 1000


PTO 540

- Invertendo la posizione delle pulegge si passa da PTO 1000 a PTO 540
- Inversant la position des poulies on passe de PDF 1000 à PDF 540
- Inverting the position of the pulleys you change from PTO 1000 to PTO 540
- Um die Umdrehung von 1000 bis 540 zu wechseln, muss man die Riemenscheiben vertauschen
- Invertiendo la posición de las poleas, se pasa de TDF 1000 a TDF 540
- Инверсия положение шкивов переходе от BOM 1000 BOM 540




**AGILA 1**

- Macchina con barra posteriore e rullo
- Machine avec barre postérieure et rouleau
- Machine with rear bar and roller
- Maschine mit hinterer Stange und Walze
- Máquina con barra trasera y rodillo
- Машина с задней панелью и валиком

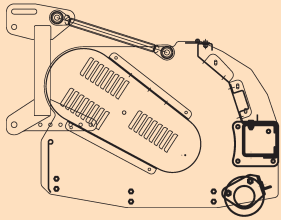


**AGILA 2**

- Macchina con barra posteriore e coppia ruote sterzanti
- Machine avec barre postérieure et couple de roues braquantes
- Machine with rear bar and pair of steering wheels
- Maschine mit hinterer Stange und Steuerräderpaar
- Máquina con barra trasera y 2 ruedas girantes
- Машина с задней панелью и парой рулевых колес

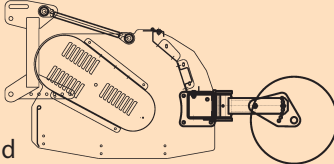


**AGILA 3**


- Macchina con rullo e lamiera di protezione
- Machine avec rouleau et tôles de protection
- Machine with roller and guarding sheets
- Maschine mit Walze und Schutzbleche
- Máquina con rodillo y chapas de protección
- Машина с валиком и защитным металлическим листом

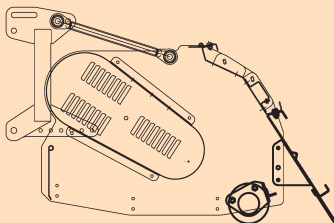

**AGILA**

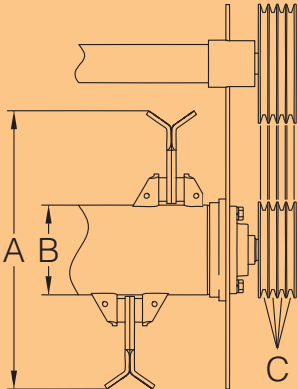

1600-1800-2100 2300-2500-2700	<b>A</b>	Ø mm 575 Ø mm 611
1600-1800-2100 2300-2500-2700	<b>B</b>	Ø mm 159x10 Ø mm 193,7x10
1600-1800 2100-2300-2500-2700	<b>C</b>	n. 3 n. 4

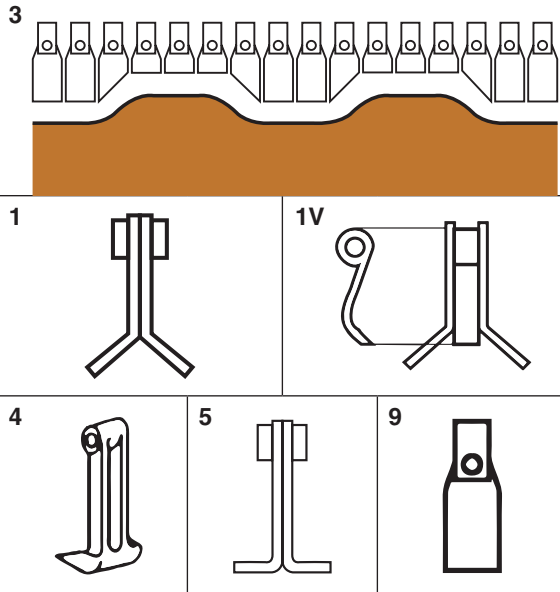

3

1 1V

4 5 9

**AGILA**

G/M del rotore	Rotor U/M
T/M du rotor	R/M de rotor
Rotor's RPM	Об/Мин ротора
1600-1800 2100-2300-2500	N° 2132
2700	N° 1910

	Velocità periferica dei coltelli
	Vitesse périphérique des couteaux
	Tip speed of blades
	Messersumfangsgeschwindigkeit
	Velocidad periferica de las cuchillas
	СКОРОСТЬ ВРАЩЕНИЯ НОЖЕЙ
<b>AGILA</b>	<b>m/sec. inches/sec.</b>
1600-1800-2100	64 2520
2300-2500	68 2677
2700	61 2402

# UNIKA - UNIKA SPOSTABILE

**UNIKA - UNIKA SP. 1**

Macchina con slitte regolabili  
 Machine avec patins réglables  
 Machine with adjustable skids  
 Maschine mit einstellbarem Kufenpaar  
 Máquina con patines regulables  
 Машина с регулируемыми лыжами

**UNIKA - UNIKA SP. 2**


Macchina con rullo  
 Machine avec rouleau  
 Machine with roller  
 Maschine mit Walze  
 Máquina con rodillo  
 Машина с валиком

**UNIKA - UNIKA SP. 3**

Macchina con coppia ruote sterzanti  
 Machine avec couple de roues braquantes  
 Machine with pair of steering wheels  
 Maschine mit Steuerräderpaar  
 Máquina con 2 ruedas girantes  
 Машина с парой рулевых колес

**UNIKA UNIKA SP.**

1600-1800-2100 2300-2500-2700-3000	<b>A</b>	Ø mm 575 Ø mm 611
1600-1800-2100 2300-2500-2700-3000	<b>B</b>	Ø mm 159x10 Ø mm 193,7x10
1600-1800-2100 2300-2500-2700-3000	<b>C</b>	n. 4 n. 5

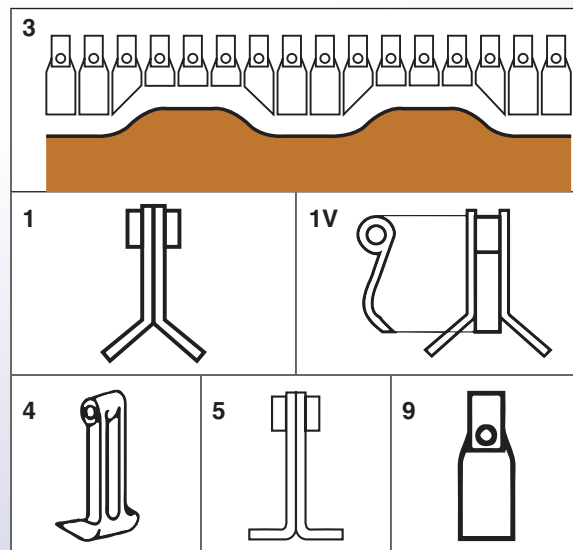

**UNIKA - UNIKA SP.**

G/M del rotore	Rotor U/M
T/M du rotor	R/M de rotor
Rotor's RPM	Об/Мин ротора
PTO 540	PTO 1000
1600-1800-2100 2300-2500-2700-3000	1600-1800-2100 2300-2500-2700-3000
N° 1875	N° 1800

	Velocità periferica dei coltelli		
	Vitesse périphérique des couteaux		
	Tip speed of blades		
	Messersumfangsgeschwindigkeit		
	Velocidad periferica de las cuchillas		
	СКОРОСТЬ ВРАЩЕНИЯ НОЖЕЙ		
<b>UNIKA - UNIKA SP.</b>	<b>m/sec. inches/sec.</b>		
PTO 540	1600-1800-2100	56	2205
	2300-2500-2700	60	2362
PTO 1000	1600-1800-2100	54	2126
	2300-2500-2700	58	2283

FALC - Via Proventa, 41 - 48018 FAENZA (ITALIA) - e-mail: info@falc.eu - www.falc.eu

Tel. +39 0546 29050  
 Fax +39 0546 663986

