

IMPORTANT!

DO NOT DESTROY!

PLEASE READ!

Herd

**225 MANUAL CONTROLLED
BANDING KIT
FOR HERD MODELS 2440,
1200C AND 750**

**INSTRUCTIONS FOR
ASSEMBLY, MOUNTING,
AND OPERATING**



REPAIR PARTS LIST

**HERD SEEDER CO., INC.
2383 SOUTH U.S. 35
LOGANSPOET, IN 46947**

574-753-6311 FAX: 574-722-4106

WWW.HERDSEEDER.COM INFO@HERDSEEDER.COM

INSTRUCTIONS FOR INSTALLING #225 BANDING KIT ON HERD BROADCASTERS

For Model 2440, use all instructions below except No. 2 and No. 12. For Model 1200C and 750, to be equipped with #1009 main frame, #1003, 1" pin, #1004, 3" hairpin cotter and #1006, hexhead capscrew of #1000 hydraulic kit, use all instructions below.

1. Install tumbling shaft on shaft of gearcase of broadcaster and secure with spring pin. (furnished), for extra precaution, a wire may be run through the spring pin and be secured.

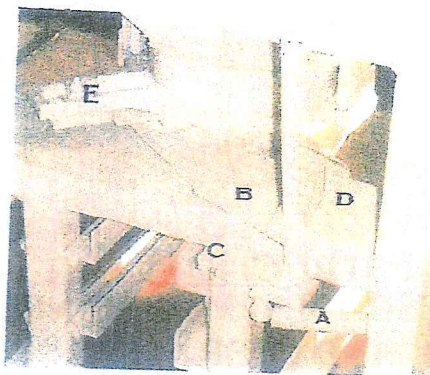


Figure 1

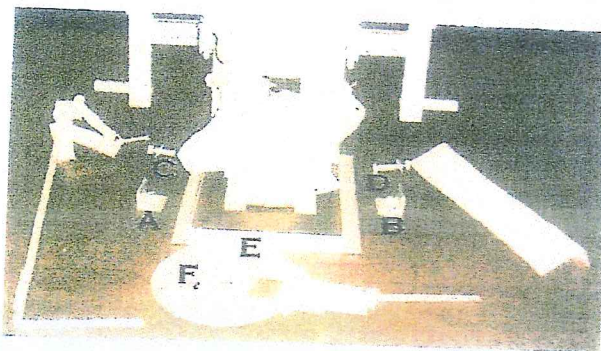


Figure 2

2. See Figure 1: Remove manual control handle as follows:
 - A. Remove tension spring (A) on handle by loosening eyebolt on spring.
 - B. Remove bolt (B) that runs through opening plate linkage and handle linkage.
 - C. Remove 5/16 X 1-1/4" capscrew that bolts handle to broadcaster. Rock handle down and out to remove. (C)
3. If you have a Model 2440 with hydraulic controls or have a 1200C or 750 with the 1000 hydraulic kit installed, you will need to remove the 48" Push-Pull Cable. To do this, remove pin through clevis at top, remove clevis, and remove nut and washer holding cable to bracket, and then remove cable through eyelet. Replace washer, nut, clevis and pin for future use.
4. Remove guard or deflector (D, in Figure 1) by: removing the two sheet metal screws that fasten the deflector plate to 2" square tubing.
5. See Figure 2: Remove the two lower 3" bolts (C & D). Remove the two "L" plates (A & B) that secure base plate to bottom of hopper. Loosen two upper 3" bolts that run through "L" angles. Rock down the gearcase, base plate and fan. Remove agitator (E) 1" washer (F) spring and base plate.

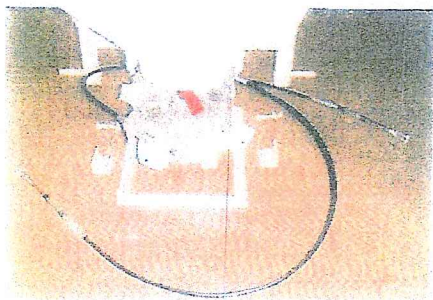


Figure 3

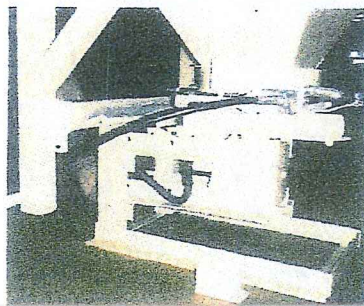


Figure 4

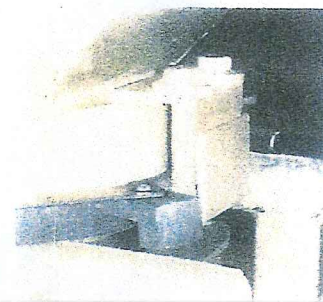


Figure 5

6. See Figure 3: Place dual-opening banding kit base plate (1111) on gearcase shaft with opening plates next to fan.
7. For fertilizer and material that needs agitation, place washer and spring on shaft, then agitator #220 that came with banding kit.
8. For spreading insecticide or herbicide granules, no agitation is needed. Therefore you do not replace an agitator, but do place second spring on top of first spring, then washer. Use agitator bolt to hold in place.
9. See Figure 4: Rock gearcase up (a short pry bar is good to use to hold gearcase up) to replace two lower 3" bolts, but **DO NOT** tighten the four 3" bolts yet.
10. See Figure 5: Bolt base plate to base of hopper, using "L" clamps and set in position as shown in Figure 5.
11. Place spacers provided between plate and fan and tighten four (4) 3" bolts.

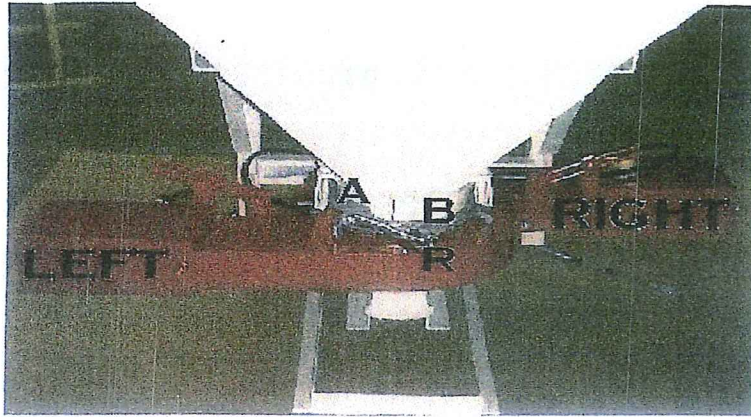
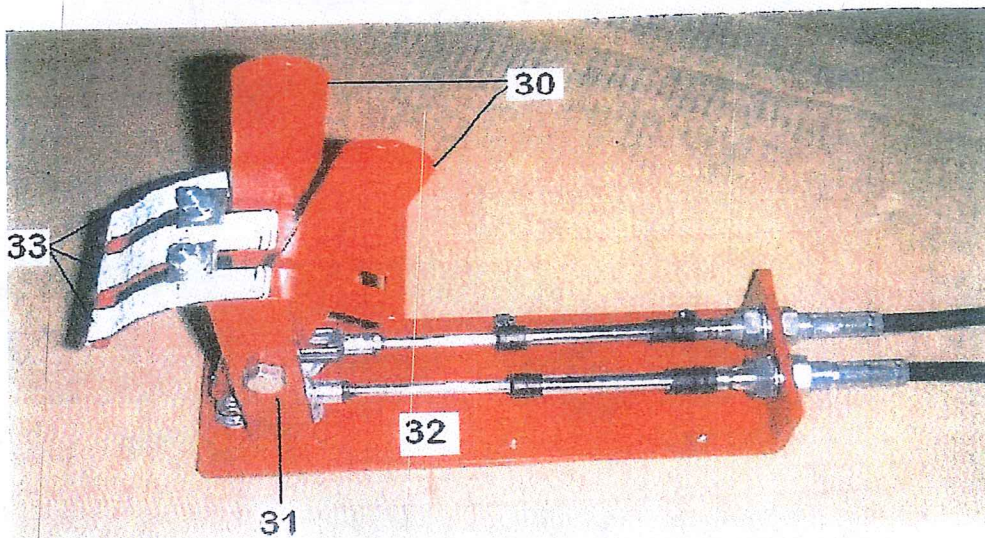


Figure 7

12. See Figure 7: To install left and right chutes:
 - A. Remove 5/16" 'Jack' bolt, found on side of front half of chute and re-thread from opposite direction. Also, remove two "L" angle clamps from front half of chute.
 - B. Place front half of housing (chute) over fan. Then place back half of housing over fan, bolting front and back housings together. Clamp complete housing to base plate with four clamps, making sure that chutes are set at right angles to broadcast spreader.
 - C. Check to see if fan rotates freely and does not strike at any place. If it does strike, see instruction No. 23, as how to correct this situation, for it is imperative that the fan rotates freely.
13. If fan strikes shield on top edge of blades, loosen four 1/2 X 3" bolts to allow the gearcase and fan to settle down as far as possible. (A few bumps with a hammer on "Z" bars will help.) Also, make sure that shields have been bolted together correctly, and also, be sure that clamps hold housing up against bottom of base plate.



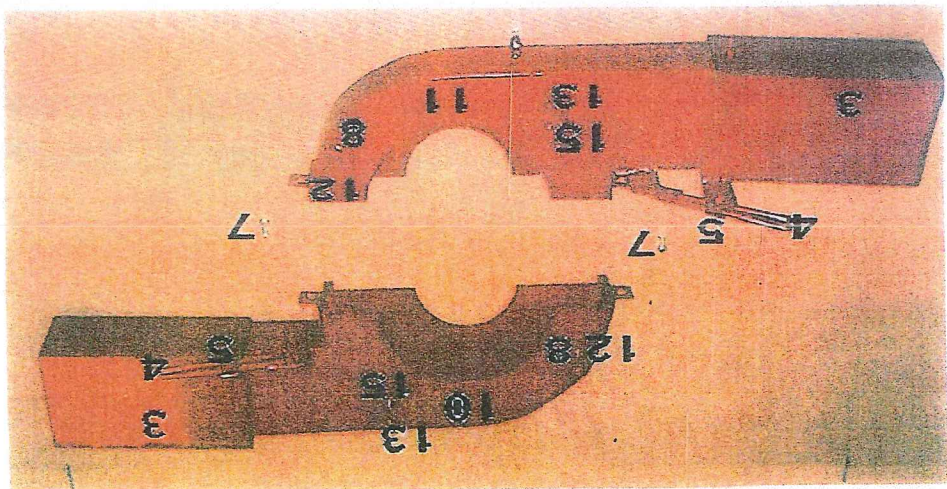
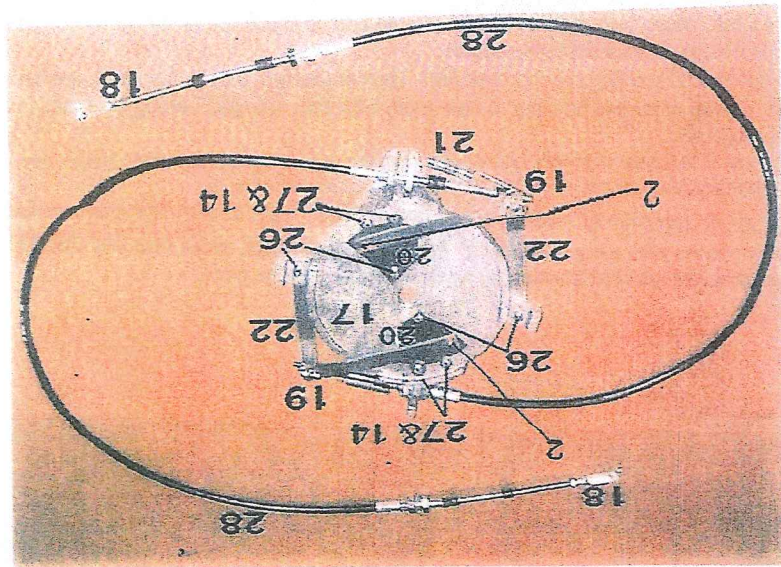
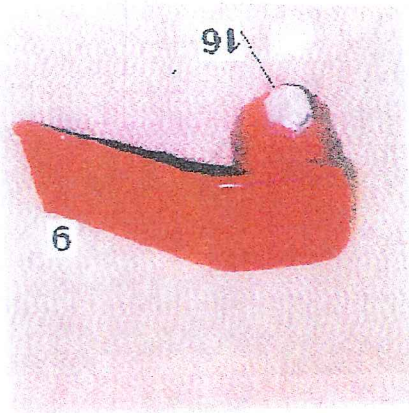


CHART OF FERTILIZER SPREAD FROM BOTH SIDES - FOR BANDING KIT 225

MPH Tractor Speed	Time Req. to travel 1 mile	Time Req. to travel 80 Rod	1/2" Opening 32.50 lbs. per minute both sides. Amount both sides	3/4" Opening 75.50 lbs. per minute both sides. Amount both sides	1" Opening 115.50 lbs. per minute both sides. Amount both sides	1-1/4" Opening 155.50 lbs. per minute both sides. Amount both sides	1-1/2" Opening 195.50 lbs. per minute both sides. Amount both sides
4	15 Min.	3.75 Min.	121.88 LBS.	283.13 LBS.	433.13 LBS.	583.13 LBS.	733.13 LBS.
5	12 Min.	3 Min.	97.50 LBS.	226.50 LBS.	346.50 LBS.	466.50 LBS.	586.50 LBS.
6	10 Min.	2.50 Min.	81.25 LBS.	188.75 LBS.	288.75 LBS.	388.75 LBS.	488.75 LBS.
7	8.57 Min.	2.14 Min.	69.55 LBS.	161.57 LBS.	247.17 LBS.	332.77 LBS.	418.37 LBS.
8	7.50 Min.	1.88 Min.	61.10 LBS.	141.94 LBS.	217.14 LBS.	292.34 LBS.	367.54 LBS.
9	6.67 Min.	1.67 Min.	54.28 LBS.	126.09 LBS.	192.89 LBS.	259.69 LBS.	326.49 LBS.
10	6 Min.	1.50 Min.	48.75 LBS.	113.25 LBS.	173.25 LBS.	233.25 LBS.	293.25 LBS.

THE ABOVE TESTS WERE MADE WITH 6-24-24 FERTILIZER. TO DETERMINE THE AMOUNT OF FERTILIZER SPREAD ON EACH SIDE, DIVIDE ABOVE AMOUNTS BY 2.

CHART FOR SPREADING HERBICIDES & INSECTICIDES WITH ATTA-CLAY CARRIER

MPH Tractor Speed	Width of Spread	Time Req. to travel 1 mile	Time Req. to travel 80 rod	Total time per acre in minutes	1/4" Opening 2.375 Lbs. per min. Amount per side	5/16" Opening 4.375 lbs. per min. Amount per side	3/8" Opening 6.375 lbs. per min. Amount per side	7/16" Opening 8.375 lbs. per min. Amount per side	1/2" Opening 10.375 lbs. per min. Amount per side
4	24"	15 Min	3.75 Min	61.875	146.95 LBS	270.70 LBS	394.45 LBS	518.20 LBS	641.95 LBS
4	36"	15 Min	3.75 Min	41.25	97.97 LBS	180.47 LBS	262.97 LBS	345.47 LBS	427.97 LBS
4	6'	15 Min	3.75 Min	20.62	48.97 LBS	90.21 LBS	131.45 LBS	172.69 LBS	213.93 LBS
5	24"	12 Min	3 Min	49.50	117.56 LBS	216.56 LBS	315.56 LBS	414.56 LBS	513.56 LBS
5	36"	12 Min	3 Min	33.00	78.38 LBS	144.38 LBS	210.38 LBS	276.38 LBS	342.38 LBS
5	6'	12 Min	3 Min	10.30	39.19 LBS	72.10 LBS	105.19 LBS	138.19 LBS	171.19 LBS
6	24"	10 Min	2.50 Min	47.25	97.97 LBS	180.47 LBS	262.97 LBS	345.47 LBS	427.97 LBS
6	36"	10 Min	2.50 Min	27.50	65.31 LBS	120.31 LBS	175.31 LBS	230.31 LBS	285.31 LBS
6	6'	10 Min	2.50 Min	13.75	32.66 LBS	60.16 LBS	87.66 LBS	115.16 LBS	142.66 LBS
7	24"	8.57 Min	2.14 Min	35.357	83.97 LBS	154.69 LBS	225.40 LBS	296.11 LBS	366.83 LBS
7	36"	8.57 Min	2.14 Min	23.571	55.98 LBS	103.12 LBS	150.27 LBS	197.41 LBS	244.55 LBS
7	6'	8.57 Min	2.14 Min	11.785	27.99 LBS	51.56 LBS	75.13 LBS	98.70 LBS	122.75 LBS
8	24"	7.50 Min	1.88 Min	30.937	73.48 LBS	135.35 LBS	197.22 LBS	259.10 LBS	320.97 LBS
8	36"	7.50 Min	1.88 Min	20.625	48.98 LBS	90.23 LBS	131.48 LBS	172.73 LBS	213.98 LBS
8	6'	7.50 Min	1.88 Min	10.312	24.49 LBS	45.12 LBS	65.74 LBS	86.36 LBS	106.99 LBS
9	24"	6.67 Min	1.67 Min	27.50	65.31 LBS	120.31 LBS	175.31 LBS	230.31 LBS	285.31 LBS
9	36"	6.67 Min	1.67 Min	18.333	43.54 LBS	80.21 LBS	116.87 LBS	153.54 LBS	190.20 LBS
9	6'	6.67 Min	1.67 Min	9.166	21.77 LBS	40.10 LBS	58.43 LBS	76.77 LBS	95.10 LBS
10	24"	6 Min	1.50 Min	24.75	58.78 LBS	108.28 LBS	157.78 LBS	207.28 LBS	256.78 LBS
10	36"	6 Min	1.50 Min	16.50	39.19 LBS	72.19 LBS	105.19 LBS	138.19 LBS	171.19 LBS
10	6'	6 Min	1.50 Min	8.25	19.59 LBS	36.09 LBS	52.59 LBS	69.09 LBS	85.59 LBS

(TESTS WERE MADE USING 20/40 SIZE MATERIAL)

CAUTION: Read labels carefully and follow instructions for spreading material. Don't Take Chances! Be Safe!
Material must be clean with no lumps for accurate spreading. Do not use agitator when spreading insecticides or herbicides, as agitator will grind up material, making dust and forming ring of material over opening. Check you plate for closing. When cylinder shaft is fully extended, opening plate should just close. Spring is used to keep tension on push-pull cable and clevis, for more accurate movement of opening plate.

EXAMPLE: 5 MPH tractor speed - 36" spread width - 33 minutes to cover 1 acre.
5/16" opening will put on 144.38 lbs. per acre - would require 4 minutes to go 80 rods or 12 minutes to go 1 mile.
Amount per side = 4.375 lbs. per minute for checking.

HERD SEEDER CO., INC.
P.O. BOX 448, LOGANSPORT, IN 46947
PHONE: 574-753-6311 FAX: 574-722-4106
www.herdseeder.com info@herdseeder.com

Form 12-225 10/05

