




MaterMacc

*JOHN DEERE
CONVERSION KIT*


INSTRUCTIONS

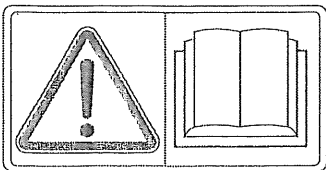

www.matermacc.it

Cod. 58312011



Rev. 0/04

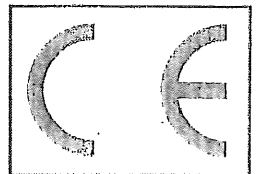

matermacc@tin.it


JOHN DEERE SERIES 7000
CONVERSION KIT

JOHN DEERE PLANTING UNIT

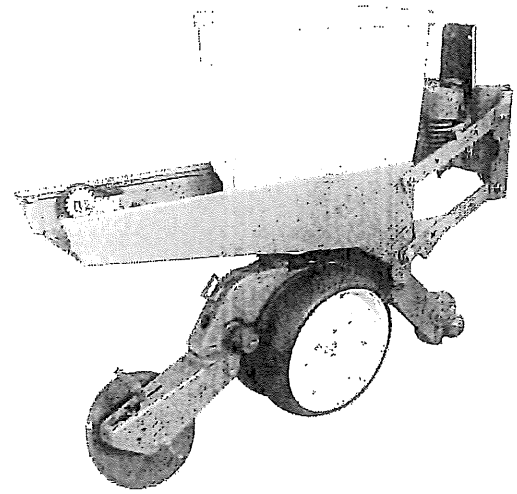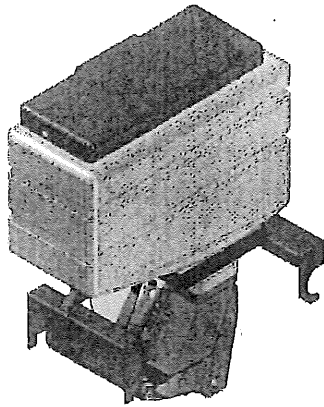


1

Take off the seed hopper with the metering unit

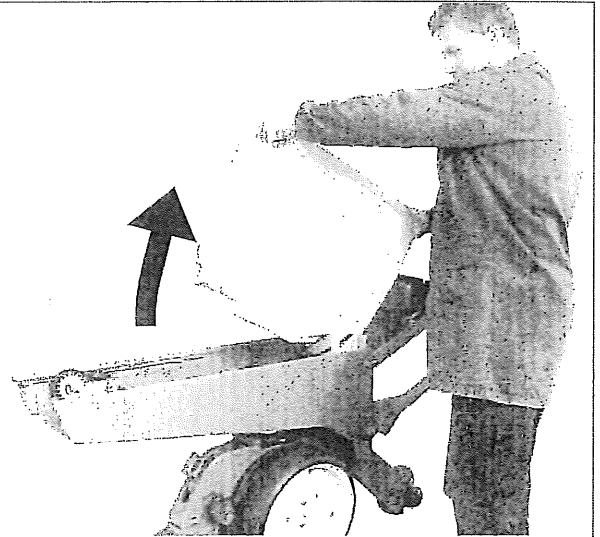



2

Control the position of the drive sprocket flange, if it is in pos. **A** unscrew the bolts and place it in pos. **B** (see Fig.B1).

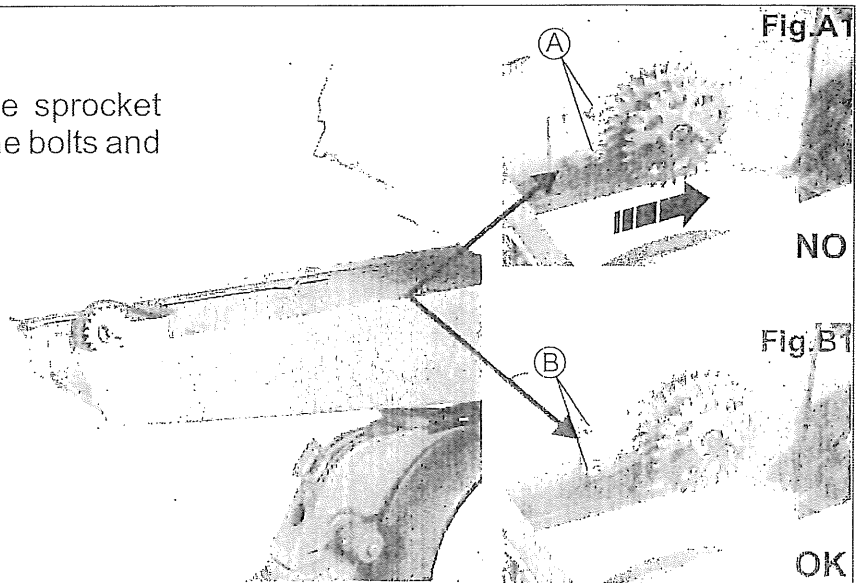

3


Once placed the drive sprocket flange from pos. **A** to pos. **B** shorten the chain **C** 3 links.

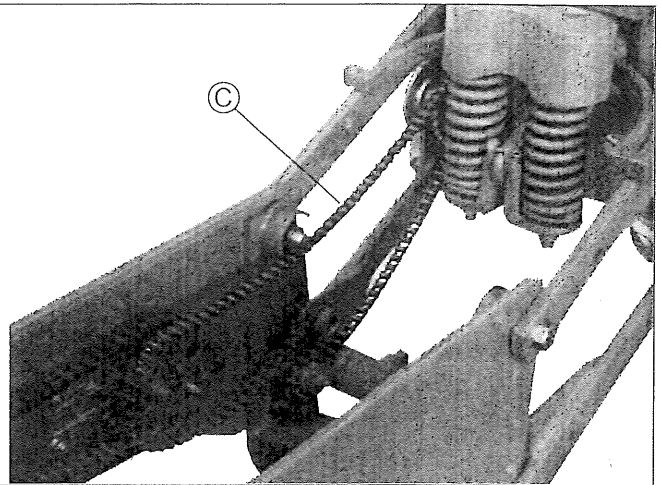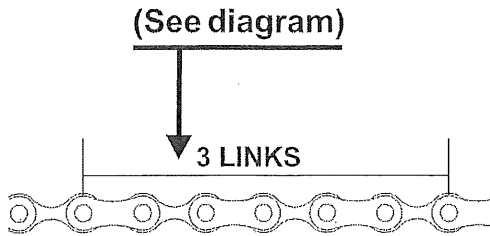

#41


4



Drill a hole in the seed tube **D** like in figure.

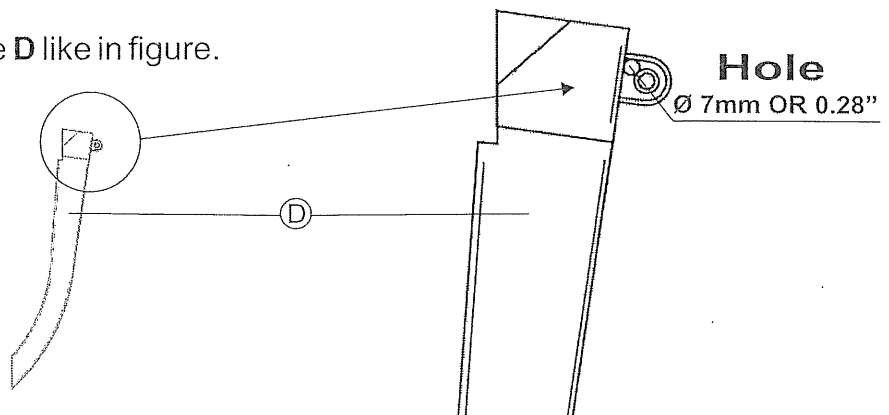

5



Place the seed tube **D** in its original place.

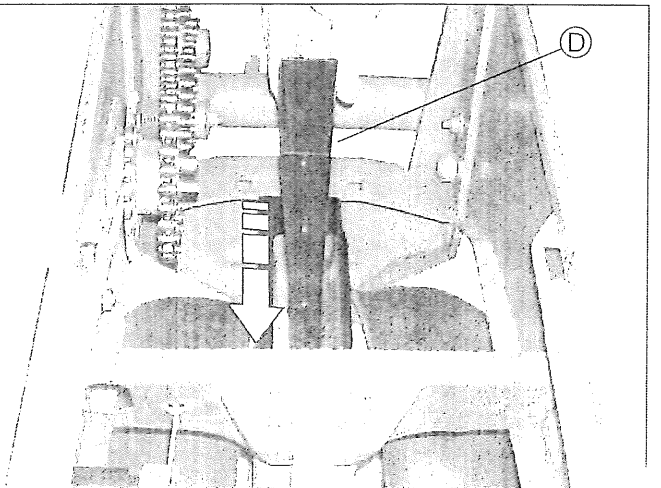

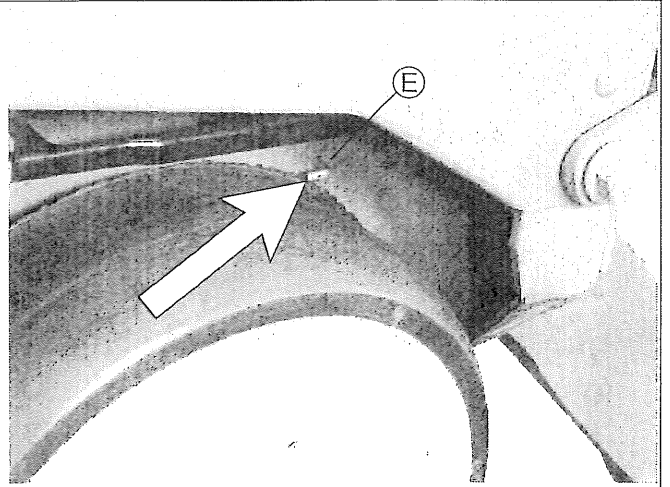
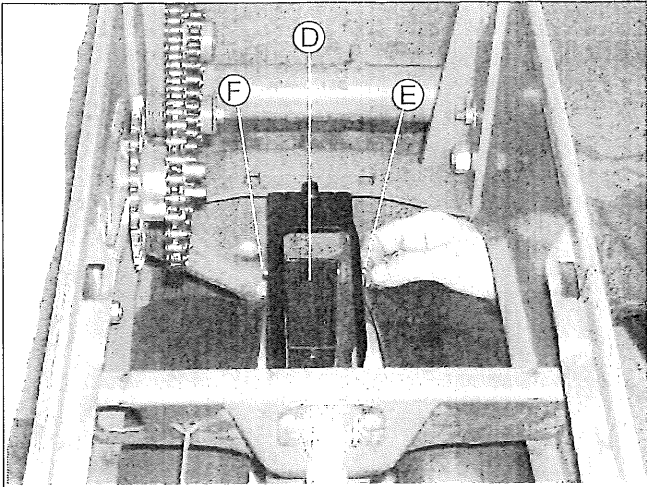


6

Mount the seed tube **D** inserting the original pin **E** through the hole **Z** and fixing it with the spring locking pin. **F**.

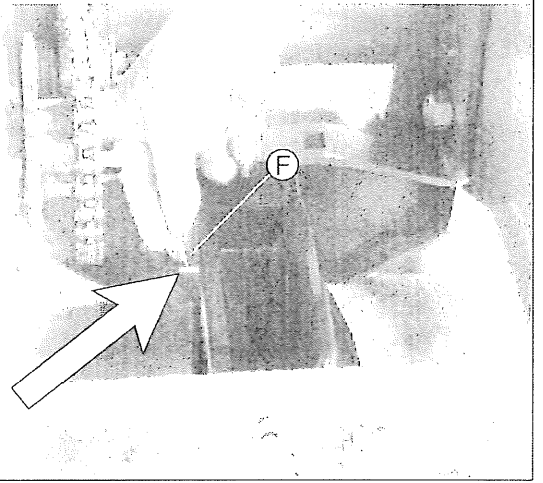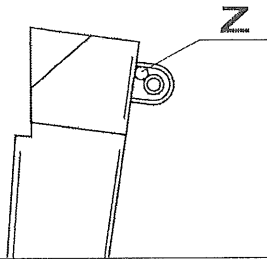


7

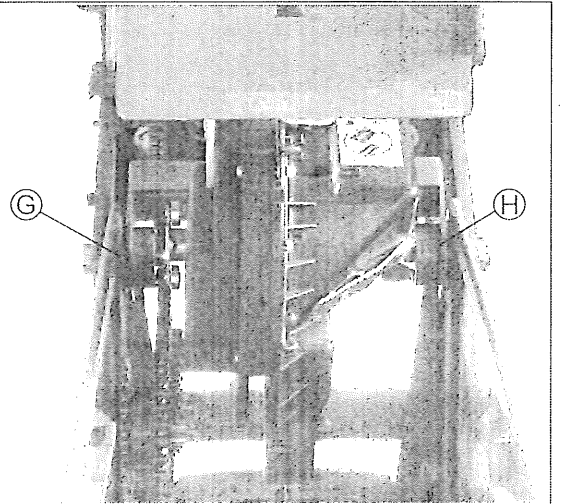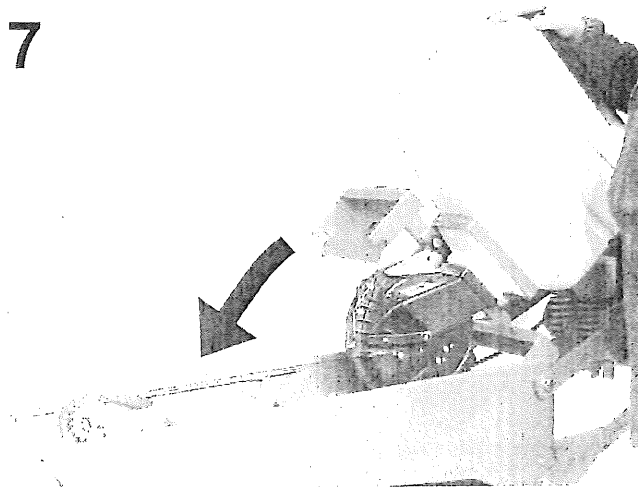

Insert the conversion kit into point **G** and **H** and push downwards.


8


Engale the hopper latch **L**.

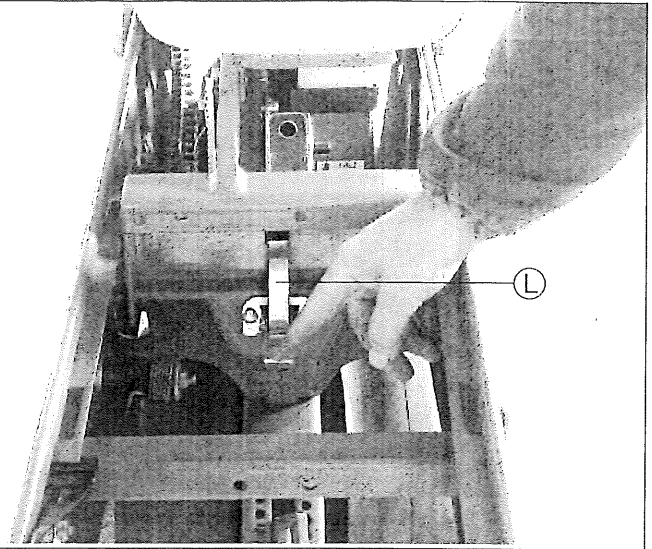


9

John Deere planting unit with
MATERMACC pneumatic metering unit
(converting kit).

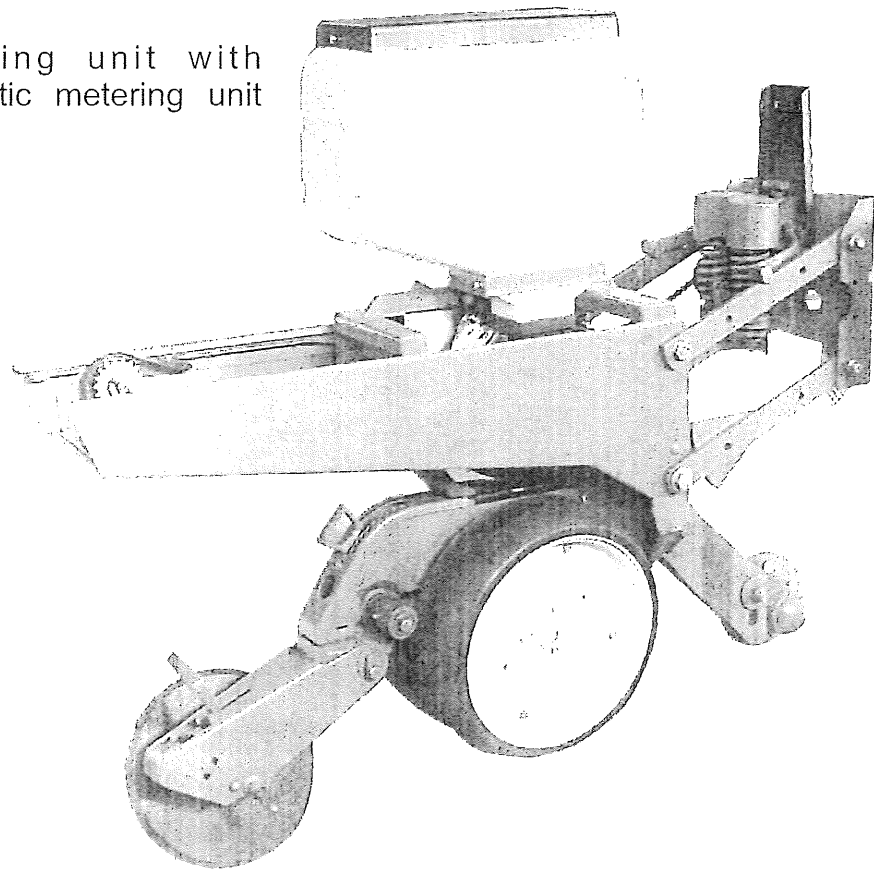

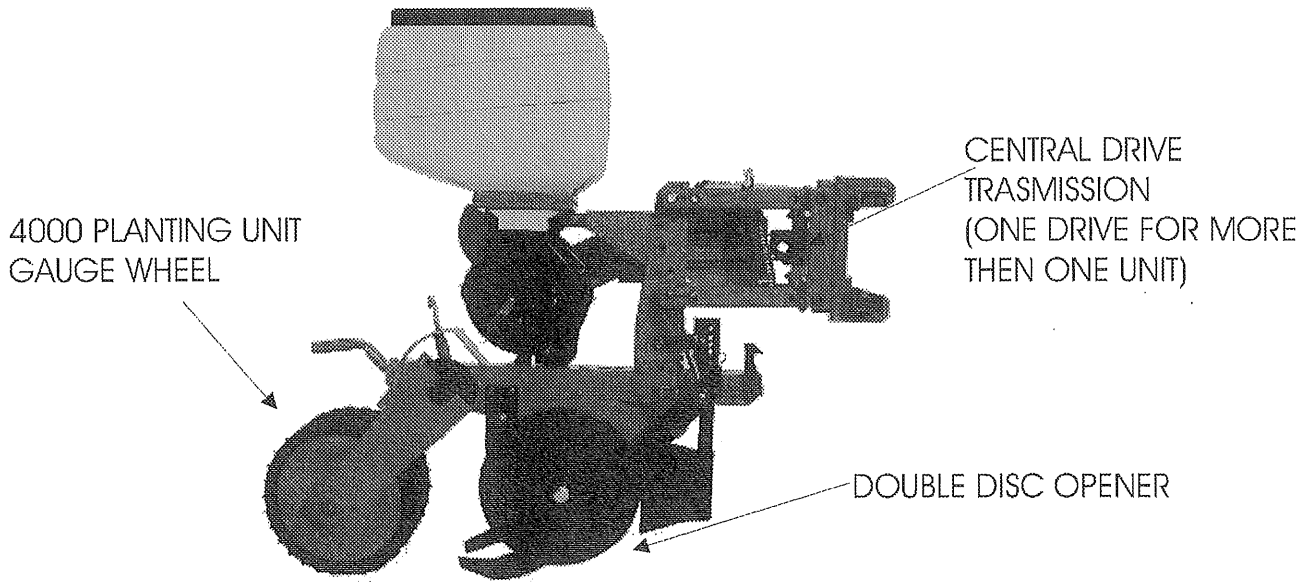

4000 PLANTING UNIT WITH DOUBLE DISC OPENER AND CENTRAL DRIVE
AVIABLE ALSO WITH SHOE OPENER

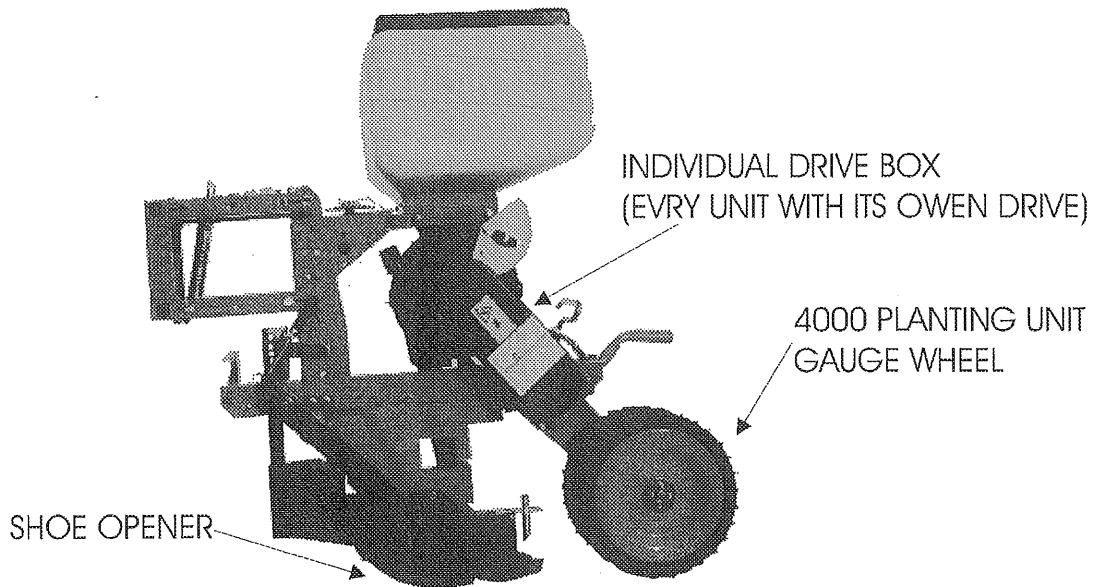

4000 PLANTING UNIT WITH SHOE OPENER AND INDIVIDUAL DRIVE
AVIABLE ALSO WITH DOUBLE DISC OPENER