



OPERATOR'S / PARTS MANUAL

C2302

10/2008



LYNX 52 LYNX 62 LYNX 70

GENERAL SAFETY

WHEN YOU SEE THIS SYMBOL



ATTENTION!
BE ALERT

YOUR SAFETY IS INVOLVED

This symbol «SAFETY ALERT» is used in this manual and on the safety decals on the Snowblower. It warns you of the possibility of danger. Carefully read, understand and follow all safety recommendations before operating the Snowblower.

- 1) Careful operation is the best assurance against accidents. Carefully read this manual and follow all recommendations before operating your Snowblower. It is the owner's responsibility to make sure that anyone who will operate the Snowblower will read this manual before operating the equipment.
- 2) Familiarize yourself with all controls and always be ready to stop the Snowblower quickly in case of emergency.
- 3) Never let a child operate the Snowblower.
- 4) Do not modify the Snowblower. Any non authorized modification may affect the efficiency and/or safety of the equipment.
- 5) Never operate the Snowblower with defective parts or if damaged in any way. Have it repaired before operating.
- 6) Make sure all fasteners are in place and properly secured or tightened.
- 7) Avoid wearing loose fitting clothing when working with the Snowblower. These could get entangled in moving parts of the equipment and cause accidents.
- 8) Prolonged exposure to noise may hamper hearing. Protect yourself by wearing adequate protection devices.
- 9) Hydraulic fluids under pressure can damage your skin. Do not use your hands to locate a leak.
- 10) Before the beginning of the snow season, inspect all areas where the Snowblower will be used and remove any object which may cause an accident and/or damage the equipment.
- 11) Never operate your Snowblower in poor visibility or without proper lighting conditions.

SAFETY IN OPERATION

- 1) Be sure there are no obstructions around the equipment and that no one stands near the equipment when in operation.
- 2) Do not operate an engine in a confined or non ventilated area.
- 3) Do not perform any adjustments, cleaning, maintenance or repairs with the engine running. The engine must be stopped and the P.T.O. disengaged. Preferably remove the key from the ignition.
- 4) Wear adequate clothing when working in cold or windy conditions.
- 5) Before operating, make sure the P.T.O. is properly installed and secured.
- 6) Before starting-up the Snowblower, make sure the auger and drum areas are free of ice.
- 7) Put P.T.O. control in neutral position before starting engine.
- 8) Keep hands, feet and clothing away from moving parts of the Snowblower. Stay away from the discharge chute.
- 9) Before unplugging the chute, always disengage the P.T.O., stop the engine and relieve all hydraulic pressures.
- 10) Do not operate in excessive inclined conditions. Be careful when turning in slopes.
- 11) Never operate your Snowblower with missing guards or without protective devices in place.
- 12) Do not operate your Snowblower near buildings, windows or other vehicles without prior and proper adjustment of the chute deflector.
- 13) Never aim discharge chute towards people or animals. This may cause serious injuries.
- 14) Always reduce operating speed in slippery conditions.
- 15) Be careful when backing-up, make sure you have good visibility.
- 16) Always be on the lookout for objects which may enter the Snowblower.
- 17) If undue vibrations are felt, disengage the P.T.O., stop the motor and look for the cause of the vibration. Vibration is usually the indication of a problem.
- 18) At the end of the operation, disengage the P.T.O., lower the Snowblower, put transmission in neutral, apply parking brake, stop engine and remove the key from the ignition.

SAFETY WITH MAINTENANCE

- 1) Perform the Snowblower maintenance according to recommendations contained in this manual.
- 2) Stop engine and relieve all hydraulic pressures before doing inspection, maintenance or repairs.
- 3) Never perform any work under the Snowblower while it is supported only by the tractor's hydraulic system. It must be completely supported by wooden blocks or other safe means.

SAFETY IN TRANSPORT

- 1) On public roads, use proper safety lights and check local regulations.
- 2) Be alert while driving on the road. Never carry passengers.
- 3) Always disengage P.T.O. while moving from one area of work to another.

- 4) The recommended road speed should be such as to maintain full control over steering and braking.
- 5) Be careful while backing up, make sure you have good visibility.

SAFETY IN STORAGE

- 1) Provide adequate supports to prevent any accidental overturning of the Snowblower.
- 2) Do not let children play in the area where the Snowblower is stored.

SAFETY DECALS

The safety decals are affixed wherever special safety precautions are indicated. Locate them on the machine and read them carefully. If a decal is damaged, lost or illegible, install a new one. Each decal is shown and identified with a part number.



Part no.: A109


Part no.: A102



Part no.: A108

MAINTENANCE

- 1) Wipe off all grease fittings with a clean cloth before adding grease in order to avoid injecting dirt and sand.
- 2) Repair or replace damaged grease fittings.
- 3) Lubricate all grease fittings every 8 hours of operation.
- 4) Oil drive chain every 8 hours of operation.
- 5) Lubricate P.T.O. shaft as indicated below:

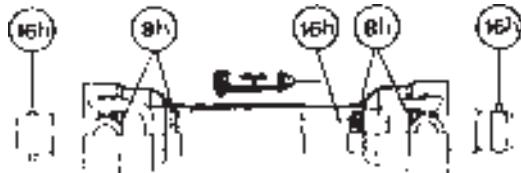

Pull out the P.T.O. and lubricate between the two tubes with low temperature grease. Drive line tubes must slide easily even in cold weather. Clean off old hardened grease and apply fresh grease as needed.

- 6) Check oil level in gear box once a month. If necessary add oil.
- 7) Check tension of drive chain every 24 hours of operation and adjust if necessary.
- 8) Check for tightness of bearing collars every 48 hours of operation.
- 9) Change gearbox oil once a year. Use gear box oil S.A.E. W90 rated API, class GL-5.

- 10) Check all nuts and bolts once a year.
- 11) For the auger drive shaft, always use grade 2 shear bolts.
- 12) For the PTO shaft, always use a grade 8.8 shear bolt.
- 13) UHMW slides do not require lubrication except at the end of the season in order to prevent corrosion of steel components that are in contact with the UHMW material.

STORAGE

- 1) Store the Snowblower in a cool, dry place.
- 2) Support the Snowblower with wooden blocks.
- 3) Keep all piston rods in the retracted position. This will assure better protection against the elements.
- 4) Clean your Snowblower.
- 5) Thoroughly inspect all parts of the Snowblower. Replace or repair worn or defective parts.
- 6) Touch-up or repaint if necessary.
- 7) Lubricate all points before storage.

SPECIFICATIONS

Design and specifications subject to change without notice

MODEL	LYNX 52	LYNX 62	LYNX 70
Horse power recommended	16 - 25	18 - 25	18 - 25
Working width	52"	62"	70"
Cutting height	25"	25"	25"
Impeller diameter	21"	21"	21"
Depth of drum	6"	6"	6"
Impeller blades	4	4	4
Size of impeller shaft	1"	1"	1"
Impeller RPM	540	540	540
Main auger diameter	13½"	13½"	13½"
Drive chain	50	50	50
Hitch category	1	1	1
P" T" O" shaft	No. 2	No. 2	No. 2
Chute rotation on UHMW	Standard	Standard	Standard
Weight (lbs)	321	338	351


SNOWBLOWERS LYNX 52 LYNX 62 LYNX 70

170-05071

SNOWBLOWERS LYNX 52 LYNX 62 LYNX 70

SNOWBLOWERS LYNX 52 LYNX 62 LYNX 70 (cont'd)

REF.	PART #	DESCRIPTION	QTY
1	120-07121	Frame 52"	1
1	120-07171	Frame 62"	1
1	120-07141	Frame 70"	1
2	110-03331	Pin category 1	2
3	Std.	Hitch pin clip 5/32"	2
4	6550	Gear box 1" o x 1-15 splines	4
5	140-03871	Key 1/4" x 1/4" x 1 5/8" lg	1
6	323-32160	Hexagonal socket set screw 1/4" 20 x 3 1/8" lg	2
7	6545	P.T.O. shaft #2 1/4" o x 1 3/8" 6	1
8	300-32370	Bolt 1/4" NC x 2 1/2" lg + nylon locknut	1
9	6565	Splined adaptor 1"-15	1
10	110-40411	Auger drive shaft 20 1/4" lg overall (including #9)	1
10	110-40481	Auger drive shaft 25 1/4" lg overall (including #9)	1
11	6566	Bushing 1" id. x 1 1/8" o.d. x 1 1/2" lg	1
12	6567	Sprocket # 50 + shearplate (including #11 and #13)	1
13	Std.	Grease fitting 1/4"-28 straight	4
14	300-36260	Bolt 3/8" NC x 1 1/4" lg + two-way locknut	4
15	UCFLD205-16	Bearing 1" o x flange	3
16	300-36250	Bolt 3/8" NC x 1" lg + nylon locknut & flat washer	2
17	300-40250	Bolt 1/2" NC x 1" lg + nylon locknut (thin)	6
18	300-36250	Bolt 3/8" NC x 1" lg + nylon locknut	2
19	300-40400	Bolt 1/2" NC x 3" lg + nylon locknut	1
20	378-40340	Flat washer 1/2" id. x 2" o.d.	1
21	110-07732	Idler sprocket #50	1
22	6604	Chute	1
23	120-07131	Chain #50 x 50" lg	1
24	190-11261	Connecting link #50	1
24	26A50	Offset link #50	1
24	59-50	Shear bolt 1/4" NC x 1" lg grade 2 + nylon locknut	1
25	312-32250	Chute adjusting bar	1
26	140-23811	Auger drive shaft guard	1
27	130-72451	Auger drive shaft guard	1
27	130-73011	Auger drive shaft guard	1
27	130-72691	U-shaped UHMW x 2" lg	1
28	190-11251	Flange	4
29	FLD205	Bearing 1" o	3
30	UC205-16	Bolt 3/8" NC x 1 1/2" lg + nylon locknut & flat washer	3
31	300-36310	Bolt 3/8" NC x 1" lg + nylon locknut	3
32	6288	Sprocket 50A36 T 1" o	1
33	110-40451	Auger LYNX 52	1
33	110-40651	Auger LYNX 62	1
33	110-40491	Auger LYNX 70	1
34	300-36250	Bolt 5/16" x 1 1/4" lg (ass. with locite 242) + lock washer	5
35	130-72661	Chute retaining bracket	4
36	130-72481	P.T.O. shroud	1
37	110-40461	Impeller 6" x 21" o 4 blades 1" o	1
38	329-34280	Bolt 5/16" NC x 5" lg + nylon locknut	4
39	300-36320	Lynch pin 31/16" x 1 1/4"	1
40	Std.		1

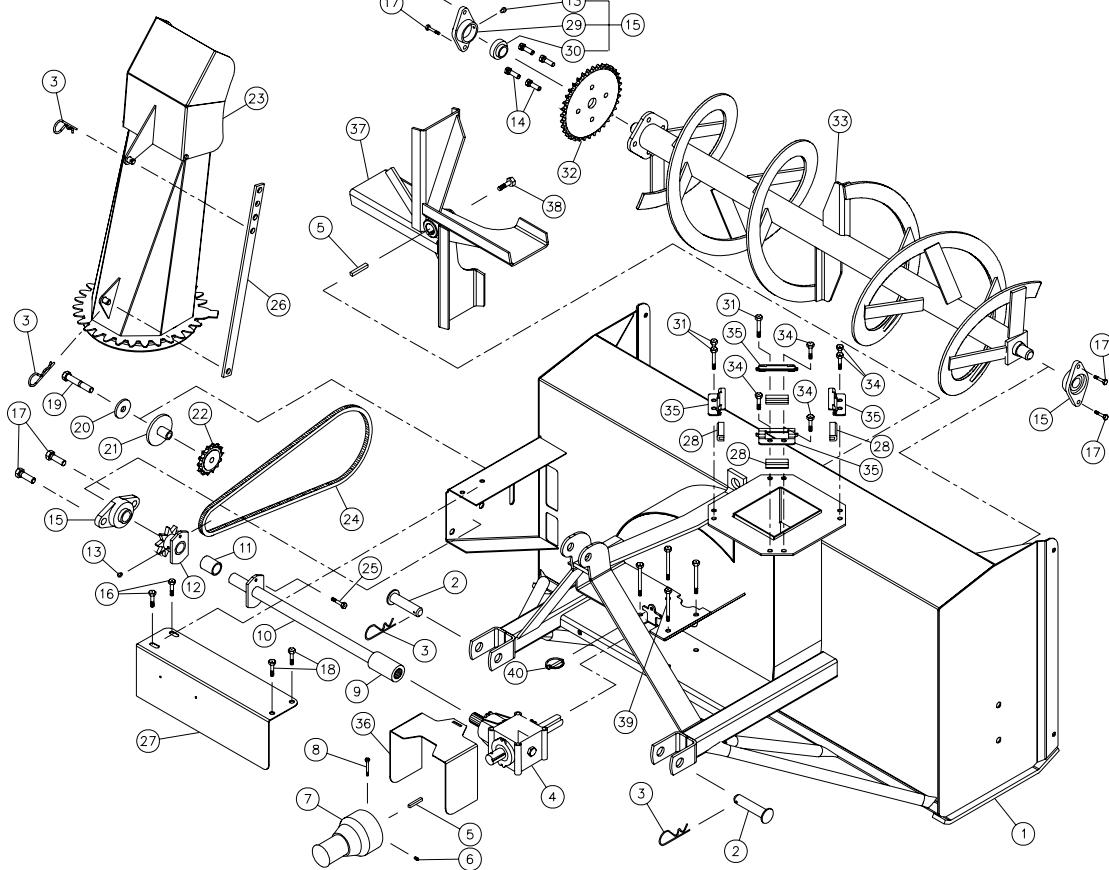


MANUAL CHUTE KIT MD-5270

HYDRAULIC CHUTE KIT HRD-5270

170-05181

INSTALLATION OF THE CHUTE ROTATION MECHANISM

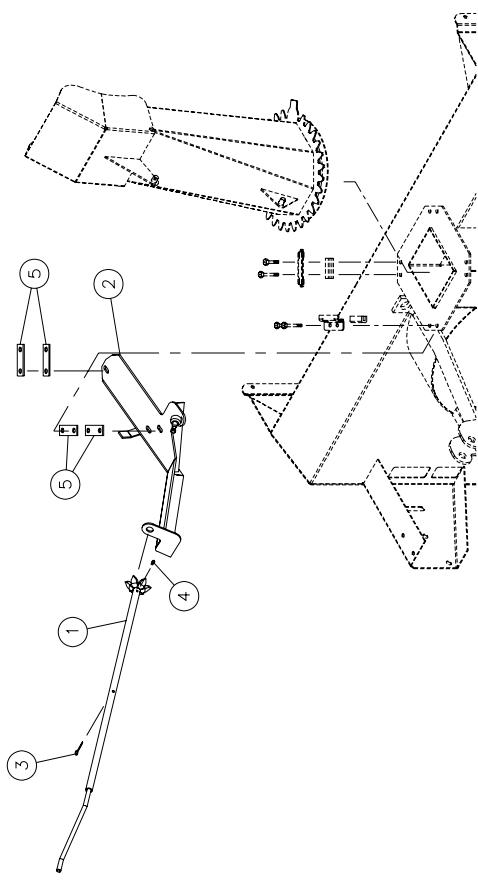


- 1- Put the two first tooth one in the other (see **A**)
 - 2- Check and adjust the hydraulic cylinder as indicated before installing:
- | Model | Min | Max |
|----------|---------|---------|
| HRD-5470 | 14 1/4" | 18 1/4" |

REF. PART # DESCRIPTION


REF.	PART #	DESCRIPTION	QTY	REF.	PART #	DESCRIPTION	QTY
1	110-27702	Crank	1	1	110-27653	Pivot	1
2	110-27712	Base	1	2	110-27583	Base	1
3	Std.	Roll pin 1/4" x 1 3/4" lg	1	3	110-22613	Arc	1
4	Std.	Grease fitting 1/4"-28 straight	1	4	25TR04	Cylinder 2 1/2" x 4" stroke	1
5	140-24311	Spacer	4	5	Std.	Bolt 1/4" NC x 1 1/2" lg grade 5 + nylon locknut	1
				6	Std.	Cotter pin 1/4" x 2"	1
				7	Std.	Grease fitting 1/4"-28 straight	1
				8RS-1/16x08 NPT	opt.	Kit of two unidirectional restrictors 110-39711	1
				9	Std.	Hairpin cotter 7/8"	2

P.T.O. SHAFT #6545 (T20)

GEAR BOX #6550

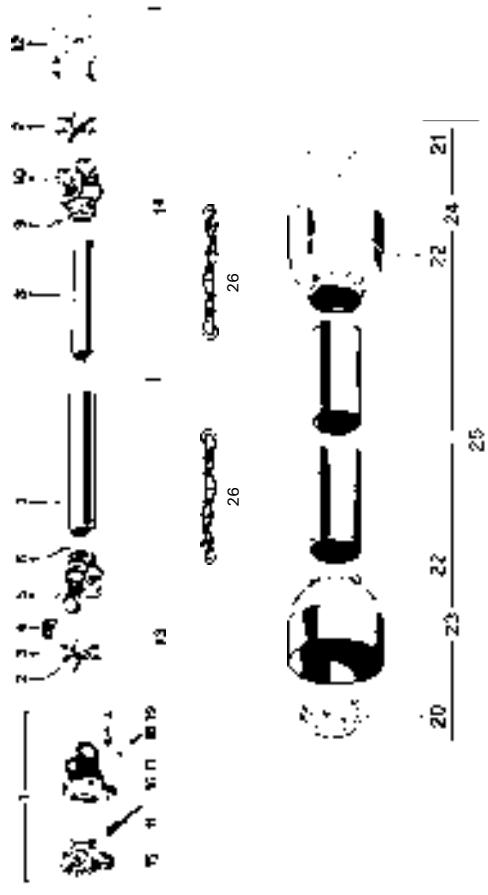


REF.	DESCRIPTION	QTY	REF.	DESCRIPTION	QTY
1	6201 Quick disconnect yoke assembly	1	6547 Gear Z24	1	
2	6208 U-joint + 4 retaining ring + 1 grease fitting	2	6548 Outside circlip	2	
3	6203 Retaining ring	8	6549 Parallel key 8 x 7 x 25	1	
4	8110 Grease fitting	2	6562 Shim	2	
5	6430 Yoke for outer tube	1	6205-2RS 6205	2	
6	6344 Pin spring	1	6552 Oil seal	3	
7	6431 Outer tube	1	6205-2RSx1" Bearing	2	
8	6432 Inner tube	1	6554 Shim	1	
9	6433 Pin spring	1	6555 Side shaft 1" - 15 splines	1	
10	6434 Yoke for inner tube	1	6556 Plug 3/8" GAS	1	
11	8068-E Yoke stopper 1 3/8"	1	6557 Casing A	1	
12	6215 Yoke with round hole 1"	1	6558 Casing A	1	
13	6435 P.T.O. section, side with safety shear bolt, outer part, without protector	1	6559 Bolt M8 x 45 .8 .8	8	
14	6546 P.T.O. section, side without safety shear bolt, inner part, without protector	1	6428 Nex. nut M8 .8	8	
15	6202 Adaptor	1	6560 Pinion shaft 216 for impeller (1" & 1")	1	
16	6204 Yoke and shearplate	1	6425 O-ring OR-3062	1	
17	6205 Ball	17			
18	6206 Grease fitting	1			
19	6207 Safety shear bolt M6 x 40mm	1			
20	6218-E Bearing ring for outer guard tube	1			
21	6219-E Bearing ring for inner guard tube	1			
22	8109 Stopper	6			
23	6220 Outer shield	1			
24	6221 Inner shield	1			
25	6222 Complete shield	1			
26	Safety chain	2			

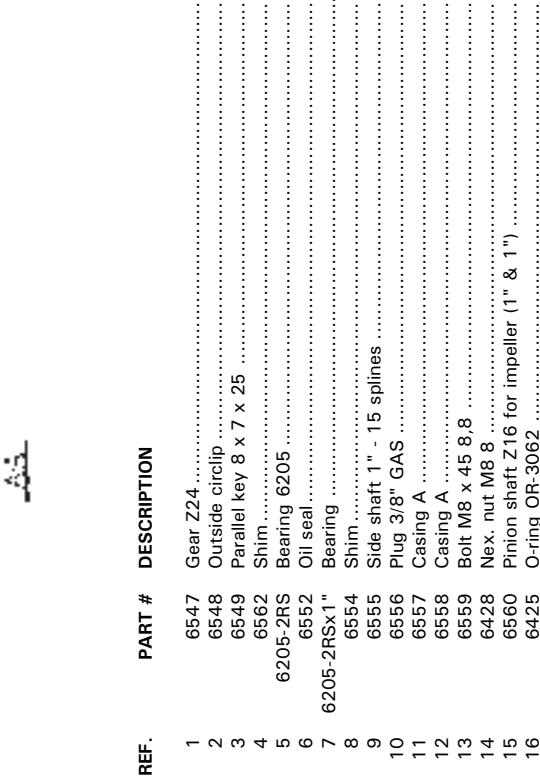

REF.	DESCRIPTION	QTY
1	Gear Z24	1
2	Outside circlip	2
3	Parallel key 8 x 7 x 25	1
4	Shim	2
5	6205-2RS Bearing 6205	2
6	Oil seal	3
7	6205-2RSx1" Bearing	2
8	Shim	1
9	Side shaft 1" - 15 splines	1
10	Plug 3/8" GAS	1
11	Casing A	1
12	Casing A	1
13	Bolt M8 x 45 .8 .8	8
14	Nex. nut M8 .8	8
15	6560 Pinion shaft 216 for impeller (1" & 1")	1
16	6425 O-ring OR-3062	1

CYLINDER 25TR04

WARRANTY

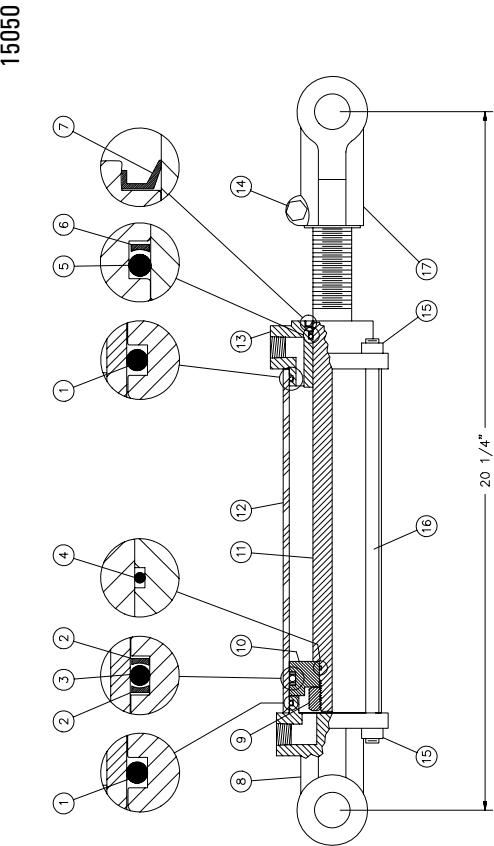

15050

PRONOVOOST warrants this product to the initial purchaser for the period of one year from the date of purchase against defects in materials and workmanship.

We will replace or repair defective parts free of charge if they are returned to our plant in St-Tite, Quebec, Canada.

Transportation charges are the responsibility of the customer. This warranty is not transferable.

Hydraulic cylinders are covered by the manufacturer of these items.

The PTO shafts are warrantied by the manufacturer and cover **only** defects in material and workmanship, and is conditional to recommended use and installation only.

REF.	PART #	DESCRIPTION	QTY
1	See RK25TR	O-ring 1/8" x 2 1/4" x 2 1/2"	2
2	See RK25TR	Back-up 2 1/2" o.d. x 3/16" Ø	2
3	See RK25TR	O-ring 3 1/16" x 2 1/8" x 2 1/2"	1
4	See RK25TR	O-ring 1/16" x 5/8" x 3/4"	1
5	See RK25TR	O-ring 1/8" x 1 1/8" x 1 3/8"	1
6	See RK25TR	Back-up 1 3/8" d.e. x 1 1/8" Ø	1
7	See RK25TR	Wiper 1 1/8" d.i. x 1 5/8" d.e.	1
8	492401	Yoke (for 2 1/2" tube)	1
9	338-46000	Nut 3/8" NF	1
10	4924-31	Piston 2 1/2" Ø	1
11	491980-04	Piston rod 1 1/8"	1
12	491668-04	Cylinder body 2 1/2" Ø	1
13	4924-21	Head (for 2 1/2" tube)	1
14	300-36355	Bolt 3/8" NC x 2 1/4" lg + nut	1
15	336-36000	Nut 3/8" NC	1
16	Std.	Threaded rod 3/8" NC x 8" lg	8
17	458599	Yoke (for 1 1/8" rod)	4
NI*	8183	Pin 1" Ø + cotter pin	1
NI*	RK25TR	Repair kit for cylinder 2 1/2" (includes # 1, 2, 3, 4, 5, 6, & 7)	2

*NI = NOT ILLUSTRATED

Ce manuel est aussi disponible en français.
Veuillez téléphoner.



LES MACHINERIES PRONOVOOST INC.
260, route 159,
Saint-Tite, Quebec, Canada, G0X 3H0
Tel.: (418) 365-7551, Fax: (418) 365-7954
E-mail: info@pronovost.qc.ca
Website: www.pronovost.qc.ca