


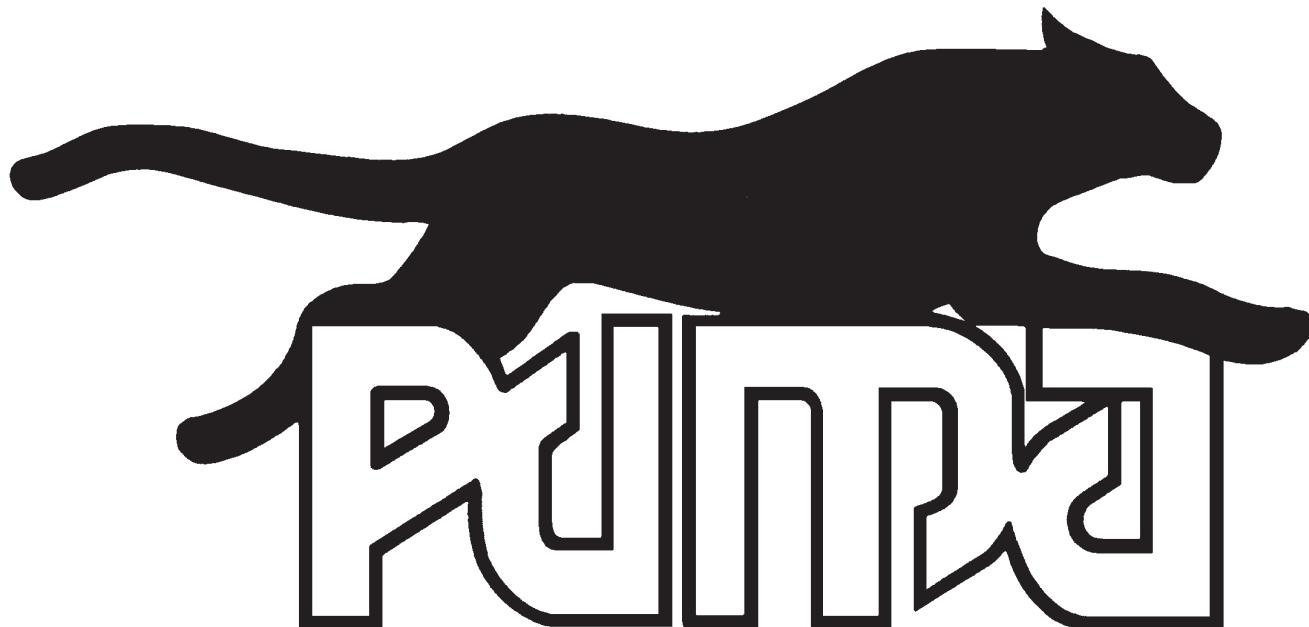

**OWNER'S  
MANUAL**



**Models**

**PUMA-54      PUMA-64      PUMA-74      PUMA-84      PUMA-94**

Copyright © Les Machineries Pronovost Inc., 1998

All rights reserved.  
Printed in Canada.

---

---

## **TABLE OF CONTENTS**

---

<b>Section</b>	<b>Item</b>	<b>Page</b>
1	<b>Introduction .....</b>	5
2	<b>Safety .....</b>	6
	General Safety .....	6
	Safety in operation .....	6
	Safety with Maintenance .....	7
	Safety in transport .....	7
	Safety in storage .....	7
3	<b>Decals .....</b>	8
	Safety Decals .....	8
	Maintenance Decals .....	9
4	<b>Maintenance .....</b>	10
5	<b>Storage .....</b>	11
6	<b>Specifications .....</b>	12
7	<b>Parts List .....</b>	13
	Snowblower PUMA-54 PUMA-64 .....	14
	Snowblower PUMA-74 .....	16
	Snowblower PUMA-84 PUMA-94 .....	18
	Manual Chute Kit MU-5464 .....	20
	Manual Chute Kit MU-74 and MU-8494 .....	21
	Hydraulic Chute Kit HU-5464 .....	22
	Hydraulic Chute Kit HU-74 and HU-8494 .....	23
	P.T.O. Shaft 6545 .....	24
	P.T.O. Shaft 8114 .....	25
	P.T.O. Shaft 8202 .....	26
	Gear Box 6550 .....	27
	Gear Box 8251 .....	28
	Cylinder 25TR04 .....	29
	Cylinder 25TR08 .....	30
8	<b>Torque chart .....</b>	31
9	<b>Warranty .....</b>	32



# **INTRODUCTION**

Your Snowblower was carefully designed and we are confident it will meet your requirements in terms of quality, performance and reliability.

This manual was prepared to assist you in the safe operation of your new Snowblower. It contains important information which will help you achieve excellent returns with your Snowblower.

Please read this manual completely before operating your Snowblower and keep it for future reference.

Before starting the machine, you or any other person who will be operating the Snowblower must familiarize yourself with the safety recommendations and the operating instructions. Please read carefully and be sure to understand and follow all recommendations and procedures.

In this manual, the right and left sides are identified as shown on Figure 1.

If you require additional information on your Snowblower, please contact your PRONOVEST Dealer.

**NOW** take a moment to enter the model, serial number and the date of purchase of your Snowblower in the space provided.

When ordering parts from your Dealer, please refer to these numbers for a fast and efficient service. Use PRONOVEST parts for replacement.

The model and serial numbers are on the name plate shown on Fig. 1.

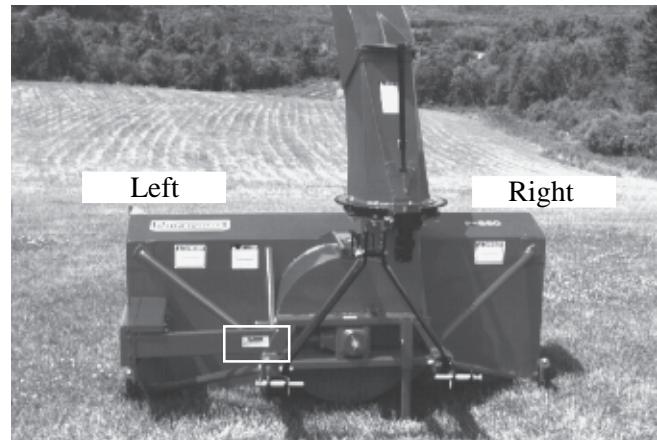


Figure 1

MODEL: \_\_\_\_\_

SERIAL NO.: \_\_\_\_\_

DATE OF PURCHASE: \_\_\_\_\_

---

---

# **SAFETY**

---

## **GENERAL SAFETY**

**WHEN YOU SEE THIS SYMBOL**



**ATTENTION!**

**BE ALERT  
YOUR SAFETY IS INVOLVED**

This symbol «**SAFETY ALERT**» is used in this manual and on the safety decals on the Snowblower. It warns you of the possibility of danger. Carefully read, understand and follow all safety recommendations before operating the Snowblower.

- 1) Careful operation is the best assurance against accidents. Carefully read this manual and follow all recommendations before operating your Snowblower. It is the owner's responsibility to make sure that anyone who will operate the Snowblower will read this manual before operating the equipment.
- 2) Familiarize yourself with all controls and always be ready to stop the Snowblower quickly in case of emergency.
- 3) Never let a child operate the Snowblower.
- 4) Do not modify the Snowblower. Any non authorized modification may affect the efficiency and/or safety of the equipment.
- 5) Never operate the Snowblower with defective parts or if damaged in any way. Have it repaired before operating.
- 6) Make sure all fasteners are in place and properly secured or tightened. Refer to torque chart on page 31.
- 7) Avoid wearing loose fitting clothing when working with the Snowblower. These could get entangled in moving parts of the equipment and cause accidents.
- 8) Prolonged exposure to noise may hamper hearing. Protect yourself by wearing adequate protection devices.
- 9) Hydraulic fluids under pressure can damage your skin. Do not use your hands to locate a leak.
- 10) Before the beginning of the snow season, inspect all areas where the Snowblower will be used and remove any object which may cause an accident and/or damage the equipment.
- 11) Never operate your Snowblower in poor visibility or without proper lighting conditions.

## **SAFETY IN OPERATION**

- 1) Be sure there are no obstructions around the equipment and that no one stands near the equipment when in operation.
- 2) Do not operate an engine in a confined or non ventilated area.
- 3) Do not perform any adjustments, cleaning, maintenance or repairs with the engine running. The engine must be stopped and the P.T.O. disengaged. Preferably remove the key from the ignition.
- 4) Wear adequate clothing when working in cold or windy conditions.
- 5) Before operating, make sure the P.T.O. is properly installed and secured.
- 6) Before starting-up the Snowblower, make sure the auger and drum areas are free of ice.
- 7) Put P.T.O. control in neutral position before starting engine.
- 8) Keep hands, feet and clothing away from moving parts of the Snowblower. Stay away from the discharge chute.
- 9) Before unplugging the chute, always disengage the P.T.O., stop the engine and relieve all hydraulic pressures.

---

---

## ***SAFETY (cont'd)***

---

- 10) Do not operate in excessive inclined conditions. Be careful when turning in slopes.
- 11) Never operate your Snowblower with missing guards or without protective devices in place.
- 12) Do not operate your Snowblower near buildings, windows or other vehicles without prior and proper adjustment of the chute deflector.
- 13) Never aim discharge chute towards people or animals. This may cause serious injuries.
- 14) Always reduce operating speed in slippery conditions.
- 15) Be careful when backing-up, make sure you have good visibility.
- 16) Always be on the lookout for objects which may enter the Snowblower.
- 17) If undue vibrations are felt, disengage the P.T.O., stop the motor and look for the cause of the vibration. Vibration is usually the indication of a problem.
- 18) At the end of the operation, disengage the P.T.O., lower the Snowblower, put transmission in neutral, apply parking brake, stop engine and remove the key from the ignition.

## ***SAFETY WITH MAINTENANCE***

- 1) Perform the Snowblower maintenance according to recommendations contained in this manual.
- 2) Stop engine and relieve all hydraulic pressures before doing inspection, maintenance or repairs.
- 3) Never perform any work under the Snowblower while it is supported only by the tractor's hydraulic system. It must be completely supported by wooden blocks or other safe means.

## ***SAFETY IN TRANSPORT***

- 1) On public roads, use proper safety lights and check local regulations.
- 2) Be alert while driving on the road. Never carry passengers.
- 3) Always disengage P.T.O. while moving from one area of work to another.
- 4) The recommended road speed should be such as to maintain full control over steering and braking.
- 5) Be careful while backing up, make sure you have good visibility.

## ***SAFETY IN STORAGE***

- 1) Provide adequate supports to prevent any accidental overturning of the Snowblower.
- 2) Do not let children play in the area where the Snowblower is stored.

# DECALS

## SAFETY DECALS

The safety decals are affixed wherever special safety precautions are indicated. Locate them on the machine and read them carefully. If a decal is damaged, lost or illegible, install a new one. Each decal is shown and identified with a part number.

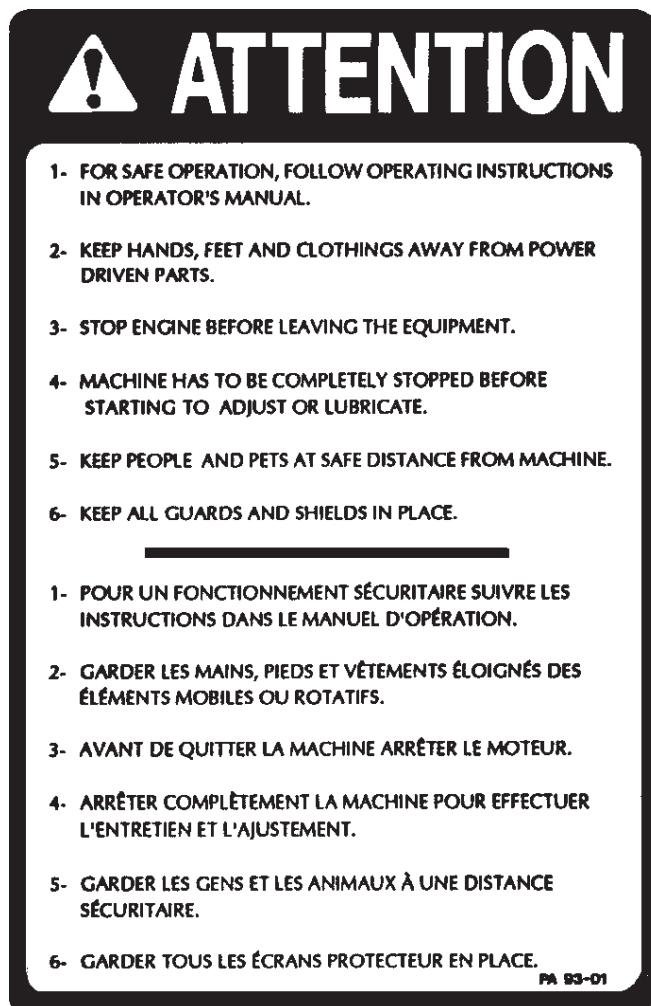


Figure 2  
Part no.: A102



Figure 3  
Part no.: A101

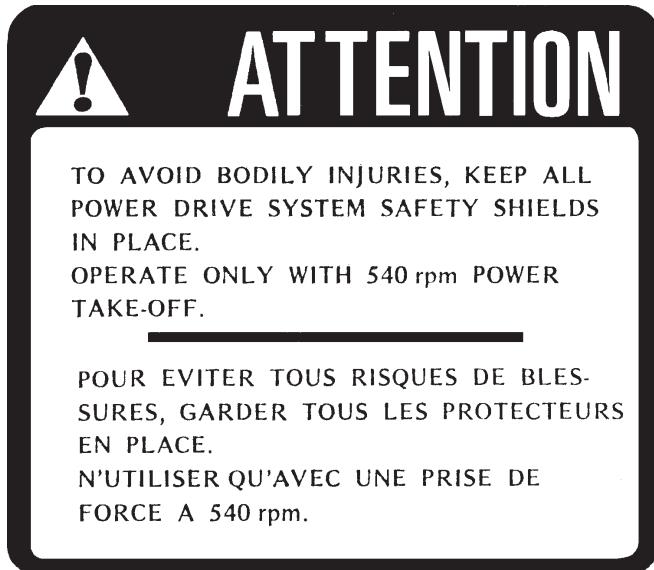


Figure 4  
Part no.: A107

## *DECALS (cont'd)*



Figure 5  
Part no.: A108



Figure 6  
Part no.: A 109

## *MAINTENANCE DECALS*

The maintenance decals indicate the points requiring lubrication. Refer to maintenance section for more details.



Figure 7  
Part no.: A104


---

---

## MAINTENANCE

---

- 1) Wipe off all grease fittings with a clean cloth before adding grease in order to avoid injecting dirt and sand.
- 2) Repair or replace damaged grease fittings.
- 3) Lubricate all grease fittings every 10 hours of operation.
- 4) Oil drive chain every 8 hours of operation.
- 5) Lubricate P.T.O. shaft as indicated below:
- 6) Check oil level in gear box once a month. If necessary add oil.
- 7) Check tension of drive chain every 25 hours of operation and adjust if necessary.
- 8) Check for tightness of bearing collars every 50 hours of operation.
- 9) Change gearbox oil once a year. Use gear box oil S.A.E. W90 rated API, class GL-5.
- 10) Check all nuts and bolts once a year. If necessary use torque chart on page 31.

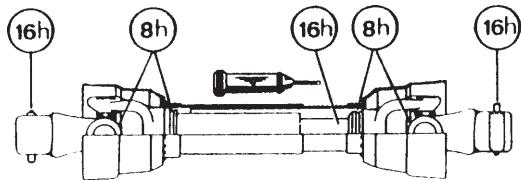

Pull out the P.T.O. and lubricate between the two tubes with low temperature grease.

---

---

## ***STORAGE***

---

- 1) Store the Snowblower in a cool, dry place.
- 2) Support the Snowblower with wooden blocks.
- 3) Keep all piston rods in the retracted position. This will assure better protection against the elements.
- 4) Clean your Snowblower.
- 5) Thoroughly inspect all parts of the Snowblower. Replace or repair worn or defective parts.
- 6) Touch-up or repaint if necessary.
- 7) Lubricate all points before storage.

---

---


## SPECIFICATIONS

---

MODEL	PUMA-54	PUMA-64	PUMA-74	PUMA-84	PUMA-94
Horse power recommended	16 - 25	18 - 25	25 - 40	40 - 75	50 - 75
Working width	54"	64"	74"	84"	94"
Cutting height	24½"	24½"	29"	34"	34"
Impeller diameter	20"	20"	22"	26"	26"
Depth of drum	6"	6"	8"	11"	11"
Impeller blades	4	4	4	4	4
Size of impeller shaft	1"	1"	1 9/16"	1 9/16"	1 9/16"
Impeller RPM	540	540	540	540	540
Main auger diameter	16"	16"	16"	19"	19"
	Drive chain	50	50	60	60
60					
Hitch category	1	1	1 & 2	1 & 2	1 & 2
P.T.O. shaft	2	2	5	5	6
Weight (lbs)	362	382	680	910	945

Specifications subject to change without notice.

## PARTS LIST

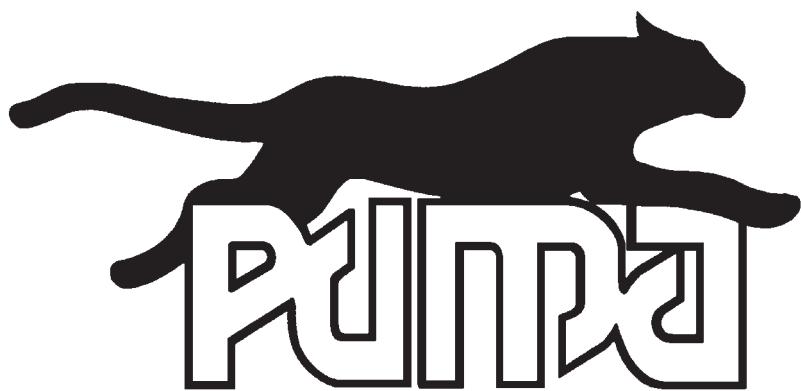


---

---

## **SNOWBLOWERS PUMA-54 PUMA-64**

---

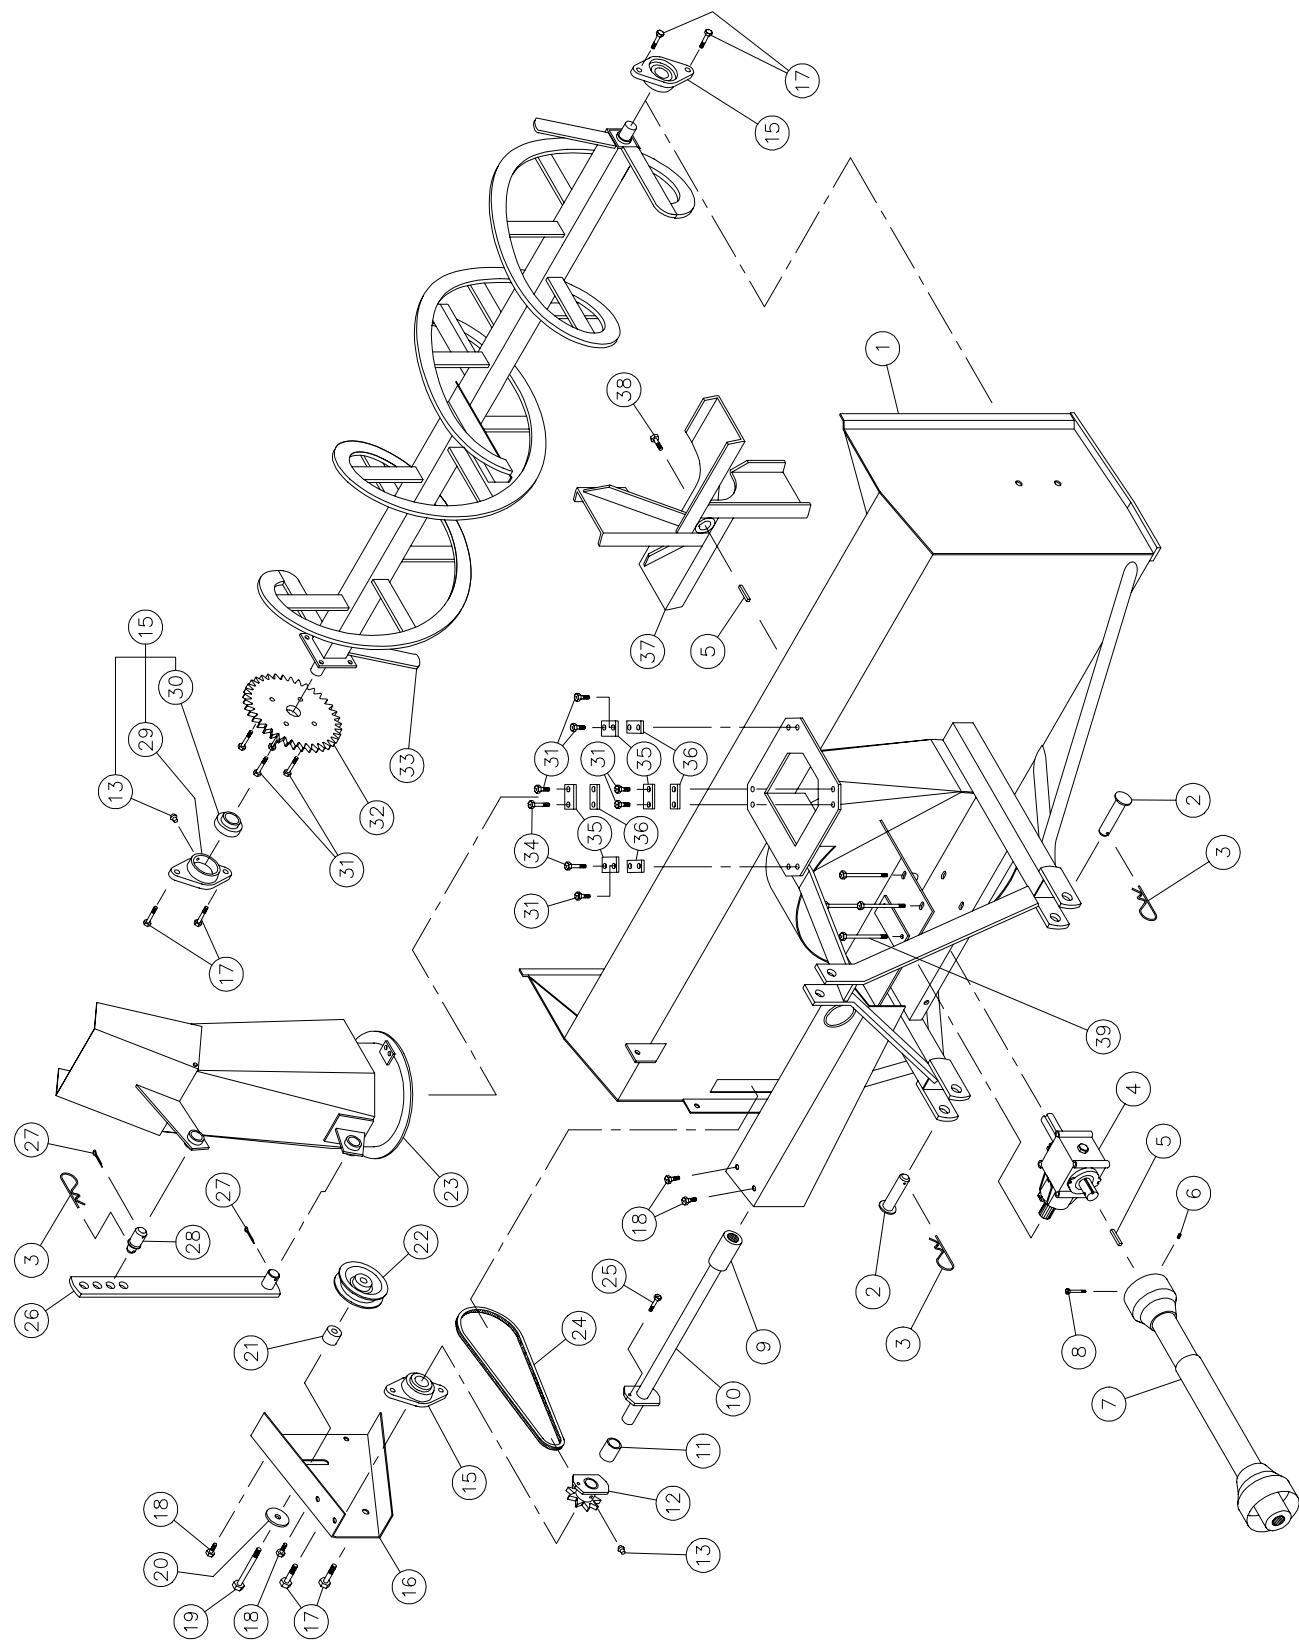

## SNOWBLOWERS PUMA-54 PUMA-64 (cont'd)


REF.	PART #	DESCRIPTION	QTY	PUMA-54	PUMA-64
1	120-00541	Frame 54"	1	-	
1	120-00551	Frame 64"	-	1	
2	110-03331	Pin category 1	2	2	
3	Std.	Hitch pin clip 5/32"	3	3	
4	6550	Gear box 1" ø x 1-15 splines	1	1	
5	140-03871	Key 1/4" x 1/4" x 1 5/8" lg	2	2	
6	Std.	Hexagonal socket set screw 1/4"-20 x 3/8" lg	1	1	
7	6545	P.T.O. shaft #2 - 1" ø x 1 3/8"-6	1	1	
8	Std.	Bolt 1/4" NC x 2 1/2" lg + nylon locknut	1	1	
9	6565	Splined adaptor 1"-15	1	1	
10	110-02821	Auger drive shaft 21" lg overall (including #9)	1	-	
10	110-02971	Auger drive shaft 26" lg overall (including #9)	-	1	
11	6566	Brass bushing	1	1	
12	6567	Sprocket # 50 + shearplate (including # 11 and # 13)	1	1	
13	Std.	Grease fitting 1/4"-28 straighr	4	4	
15	6261	Bearing 1"ø + flange	3	3	
16	130-03301	Chain guard	1	1	
17	Std.	Bolt 1/2" NC x 1" lg + nylon locknut (thin)	6	6	
18	Std.	Bolt 3/8" NC x 1" lg + nylon locknut	4	4	
19	Std.	Bolt 1/2" NC x 3 1/2" lg + nylon locknut	1	1	
20	378-40340	Flat washer 1/2" d.i. x 2" d.e.	1	1	
21	110-07731	Idler	1	1	
22	8122	Idler pulley	1	1	
23	110-02891	Chute	1	1	
24	190-00501	Chain #50 x 50 1/2" lg	1	1	
24	26A50	Connecting link #50	1	1	
24	59-50	Offset link #50	1	1	
25	Std.	Shear bolt 1/4" NC x 1" lg grade 2 + nylon locknut	1	1	
26	110-02981	Chute adjusting bar	1	1	
27	Std.	Cotter pin 5/32" x 1 1/2"	2	2	
28	150-00641	Pin for chute adjusting bar	1	1	
29	6454	Flange	3	3	
30	6455	Bearing 1" ø	3	3	
31	Std.	Bolt 3/8" NC x 1 1/2" lg + nylon locknut	10	10	
32	6288	Sprocket 50A36 T 1" ø	1	1	
33	110-02941	Auger PUMA-54	1	-	
33	110-02961	Auger PUMA-64	-	1	
34	Std.	Bolt 3/8" NC x 1 3/4" lg + nylon locknut + flat washer	2	2	
35	140-01541	Chute retaining bracket 1/4" x 1 1/2" x 2 1/4" lg	4	4	
36	140-01531	Spacer 5/16" x 1" x 2 1/4" lg	4	4	
37	110-02871	Impeller 6" x 20" ø 4 blades T 1" ø	1	1	
38	329-34280	Impeller cap screw 5/16" x 1 1/4" lg + lock washer	1	1	
39	Std.	Bolt 3/8" NC x 5" lg + nylon locknut + 6 flat washers	4	4	

---

---

## SNOWBLOWERS PUMA-74

---

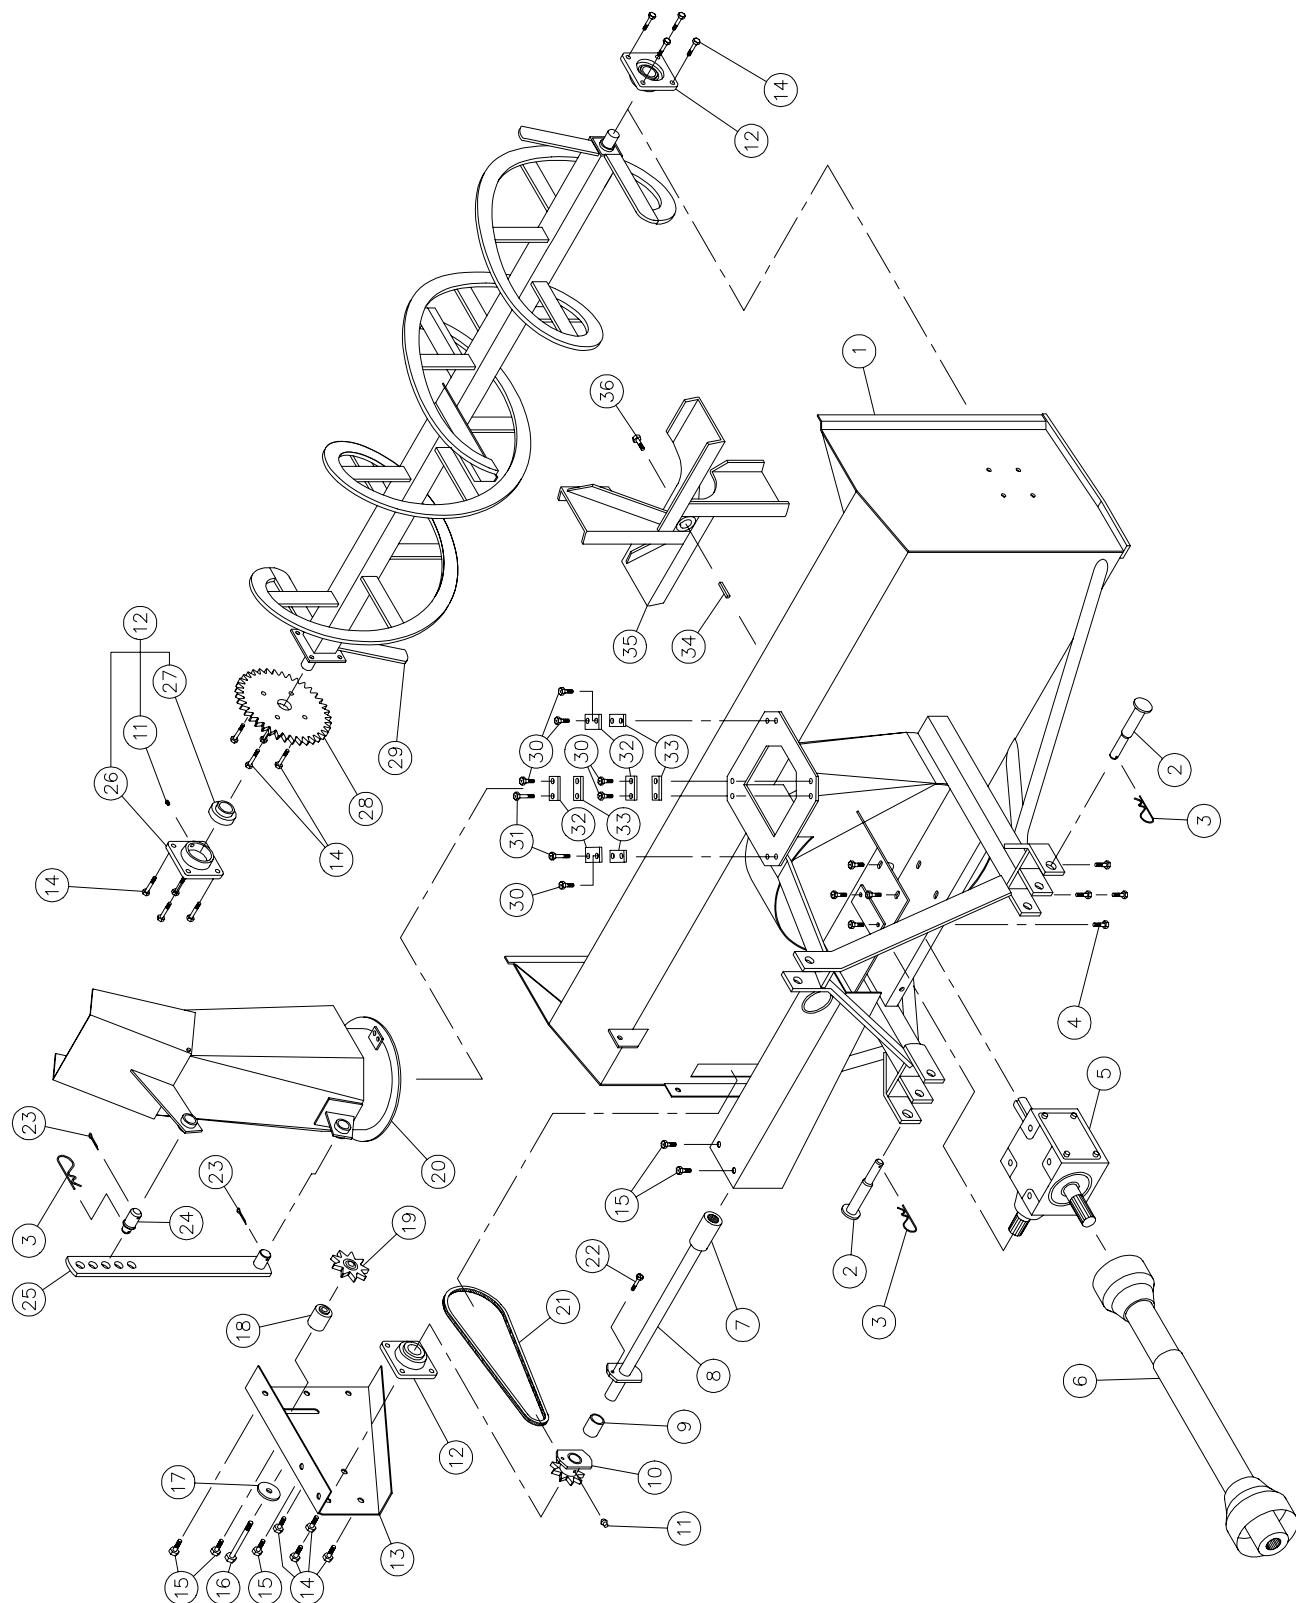

## ***SNOWBLOWERS PUMA-74 (cont'd)***


REF.	PART #	DESCRIPTION	QTY
1	120-00571	Frame 74"	1
2	110-03341	Pin category 1 & 2	2
3	Std.	Hitch pin clip 5/32"	3
4	Std.	Bolt 1/2" NC x 1" lg + lock washer + 6 flat washers	8
5	8251	Gear box T27D	1
6	8114	P.T.O. shaft #5	1
7	6466	Splined adaptor 1 1/4"-19	1
8	110-03111	Auger drive shaft 26 1/8" lg overall (including #7) (up to serial # 1218)	1
8	110-03112	Auger drive shaft 26 1/8" lg overall (including #7) (from serial # 1219 up)	1
9	6568	Brass bushing	1
10	6569	Sprocket # 60 + shearplate (including #9 and #11) (up to serial # 1218)	1
10	6570	Sprocket # 60 + shearplate (including #9 and #11) (from serial # 1219 up)	1
11	Std.	Grease fitting 1/4"-28 straight	4
12	8011	Bearing 1 1/4" ø + flange	3
13	130-03611	Chain guard	1
14	Std.	Bolt 7/16" NC x 1 1/2" lg + nylon locknut	16
15	Std.	Bolt 7/16" NC x 1" lg + nylon locknut	5
16	Std.	Bolt 1/2" NC x 3 1/2" lg + nylon locknut	1
17	378-40340	Flat washer 1/2" d.i. x 2" d.e.	1
18	110-07781	Idler	1
19	8186	Idler sprocket #60	1
20	110-03041	Chute	1
21	190-00551	Chain #60 x 63" lg	1
21	26A60	Connecting link #60	1
21	59-60	Offset link #60	1
22	Std.	Shear bolt 1/4" NC x 1 1/4" lg grade 5 + nylon locknut (up to serial # 1218)	1
22	Std.	Shear bolt 5/16" NC x 1 1/4" lg grade 2 + nylon locknut (from serial # 1219 up)	1
23	Std.	Cotter pin 5/32" x 1 1/2"	2
24	150-00641	Pin for chute adjusting bar	1
25	110-02991	Chute adjusting bar	1
26	8166	Flange	3
27	8165	Bearing 1 1/4" ø	3
28	8021	Sprocket 60A38 T 1 1/4" ø	1
29	110-03061	Auger PUMA-74	1
30	Std.	Bolt 3/8" NC x 1 3/4" lg + nylon locknut & flat washer	6
31	Std.	Bolt 3/8" NC x 2" lg + nylon locknut & flat washer	2
32	140-01541	Chute retaining bracket 1/4" x 1 1/2" x 2 1/4" lg	4
33	140-01531	Spacer 5/16" x 1" x 2 1/4" lg	4
34	8030	Key 3/8" x 3/8" x 3 1/2" lg	1
35	110-03031	Impeller 8" x 22" ø 4 blades T 1 9/16" ø	1
36	329-44311	Impeller cap screw 5/8" x 1 1/2" lg + lock washer	1

---

---

## **SNOWBLOWERS PUMA-84 PUMA-94**

---

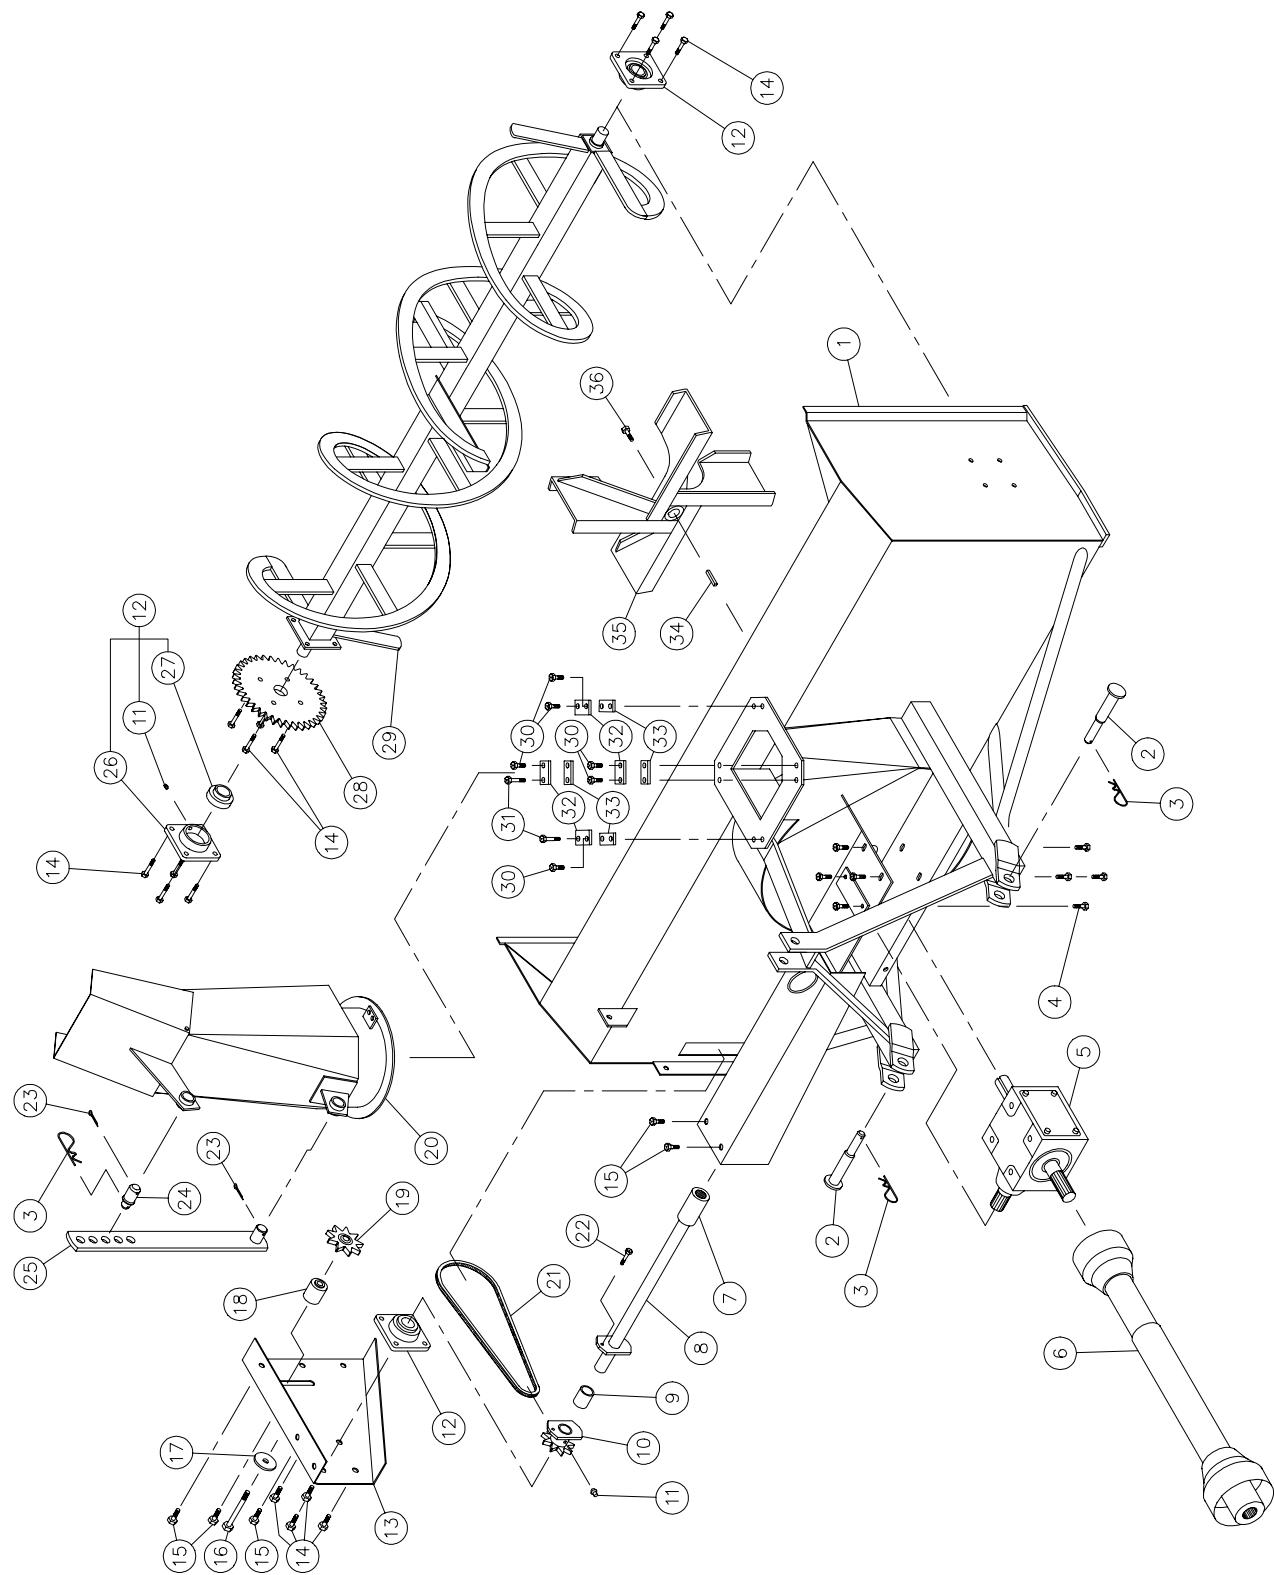

## SNOWBLOWERS PUMA-84 PUMA-94 (cont'd)


REF.	PART #	DESCRIPTION	QTY	PUMA-84	PUMA-94
1	120-00602	Frame 84"	1	-	
1	120-00812	Frame 94"	-	1	
2	110-03341	Pin category 1 & 2	2	2	
3	Std.	Hitch pin clip 5/32"	3	3	
4	Std.	Bolt 1/2" NC x 1" lg + lock washer + 6 flat washers	8	8	
5	8251	Gear box T27D	1	1	
6	8114	P.T.O. #5	1	-	
6	8202	P.T.O. #6	-	1	
7	6466	Splined adaptor 1 1/4"-19	1	1	
8	110-03351	Auger drive shaft 31 3/16" lg overall (including #7) (up to serial # 1218)	1	-	
8	110-03352	Auger drive shaft 31 3/16" lg overall (including #7) (from serial # 1219 up)	1	-	
8	110-04281	Auger drive shaft 36 3/16" lg overall (including #7) (up to serial # 1218)	-	1	
8	110-04282	Auger drive shaft 36 3/16" lg overall (including #7) (from serial # 1219 up)	-	1	
9	6568	Brass bushing	1	1	
10	6569	Sprocket # 60 + shearplate (including #9 and #11) (up to serial # 1218)	1	1	
10	6570	Sprocket # 60 + shearplate (including #9 and #11) (from serial # 1219 up)	1	1	
11	Std.	Grease fitting 1/4"-28 straight	4	1	
12	8011	Bearing 1 1/4" ø + flange	3	3	
13	130-04031	Chain guard	1	1	
14	Std.	Bolt 7/16" NC x 1 1/2" lg + nylon locknut	16	16	
15	Std.	Bolt 7/16" NC x 1" lg + nylon locknut	5	5	
16	Std.	Bolt 1/2" NC x 3 1/2" lg + nylon locknut	1	1	
17	378-40340	Flat washer 1/2" d.i. x 2" d.e.	1	1	
18	110-07781	Idler	1	1	
19	8186	Idler sprocket #60	1	1	
20	110-03171	Chute 84-94	1	1	
21	190-00581	Chain #60 x 70 3/8" lg	1	1	
21	26A60	Connecting link #60	1	1	
21	59-60	Offset link #60	1	1	
22	Std.	Shear bolt 1/4" NC x 1 1/4" lg grade 5 + nylon locknut (up to serial # 1218)	1	1	
22	Std.	Shear bolt 5/16" NC x 1 1/4" lg grade 2 + nylon locknut (from serial # 1219 up)	1	1	
23	Std.	Cotter pin 5/32" x 1 1/2"	2	2	
24	150-00641	Pin for chute adjusting bar	1	1	
25	110-02991	Chute adjusting bar	1	1	
26	8166	Flange	3	3	
27	8165	Bearing 1 1/4" ø	3	3	
28	8021	Sprocket 60A38 T 1 1/4" ø	1	1	
29	110-03211	Auger PUMA-84	1	-	
29	110-04271	Auger PUMA-94	-	1	
30	Std.	Bolt 7/16" NC x 1 3/4" lg + nylon locknut & flat washer	6	6	
31	Std.	Bolt 7/16" NC x 2" lg + nylon locknut & flat washer	2	2	
32	140-01951	Chute retaining bracket 1/4" x 2" x 3 1/2" lg	4	4	
33	140-01941	Spacer 5/16" x 1 1/4" x 3 1/2" lg	4	4	
34	8030	Key 3/8" x 3/8" x 3 1/2" lg	1	1	
35	110-03201	Impeller 11" x 26" ø 4 blades T 1 9/16" ø	1	1	
36	329-44311	Impeller cap screw 5/16" x 1 1/4" lg + lock washer	1	1	

---

---


## **MANUAL CHUTE KIT MU-5464**

---

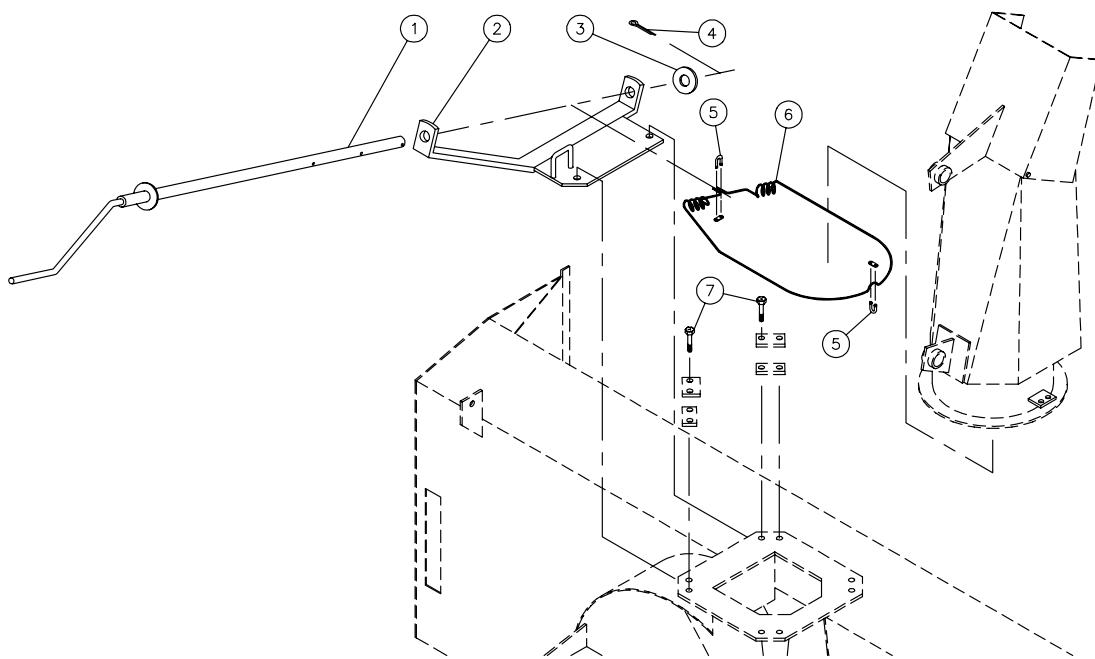


REF.	PART #	DESCRIPTION	QTY
1	110-02951	Crank .....	1
2	110-02851	Crank support .....	1
3	8206	Flat washer 1 3/8" i.d. ....	1
4	Std.	Cotter pin 5/32" x 1 1/2" lg .....	1
5	6303	Cable clamp 1/8" .....	2
6	190-00491	Cable 1/8" x 66" lg .....	1
7	Std.	Bolt 3/8" NC x 1 3/4" lg + nylon locknut + flat washer .....	2

# **MANUAL CHUTE KIT MU-74 AND MU-8494**

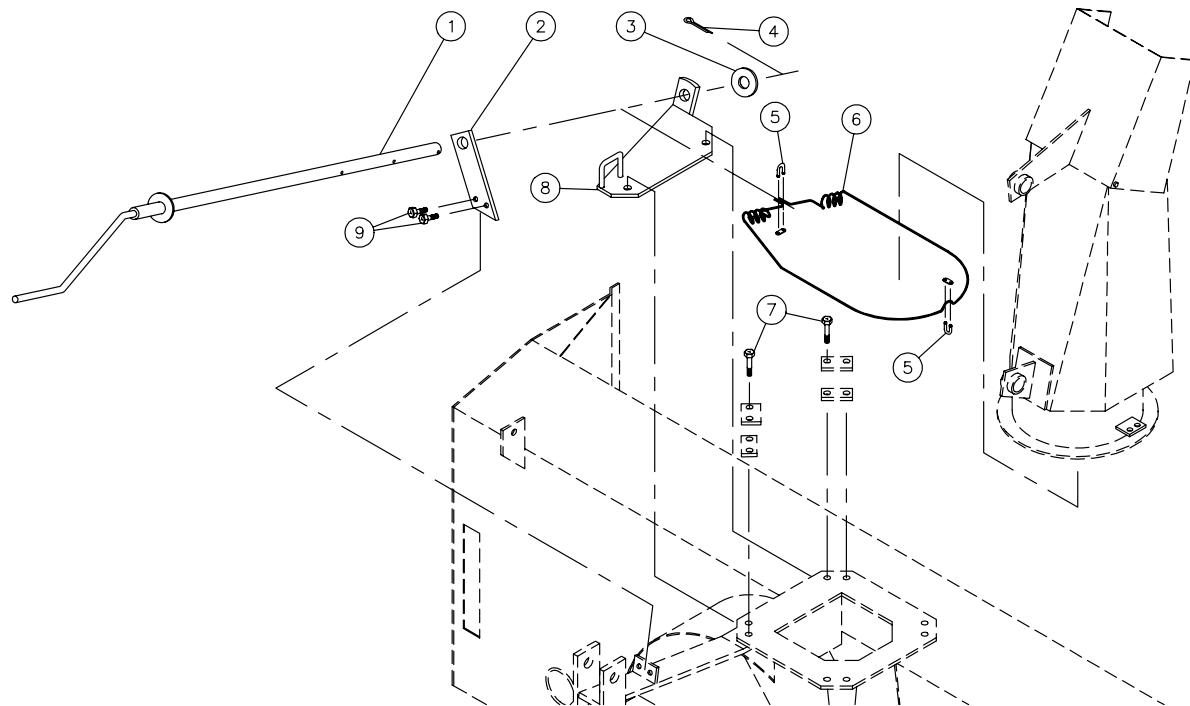


REF.	PART #	DESCRIPTION	QTY
1	110-03251	Crank .....	1 1
2	110-01801	Crank support .....	1 -
2	110-02001	Crank support .....	- 1
3	8206	Flat washer 1 3/8" i.d. ....	1 1
4	Std.	Cotter pin 5/32" x 1 1/2" lg .....	1 1
5	6303	Cable clamp 1/8" .....	2 2
6	190-00521	Cable 1/8" x 108" lg .....	1 -
6	190-00561	Cable 1/8" x 114" lg .....	- 1
7	Std.	Bolt 3/8" NC x 2" lg + nylon locknut + flat washer.....	2 -
7	Std.	Bolt 7/16" NC x 2" lg + nylon locknut + flat washer.....	- 2
8	110-03101	Crank support .....	1 -
8	110-03241	Crank support .....	- 1
9	Std.	Bolt 3/8" NC x 1" lg + nylon locknut .....	2 2

# HYDRAULIC CHUTE KIT HU-5464

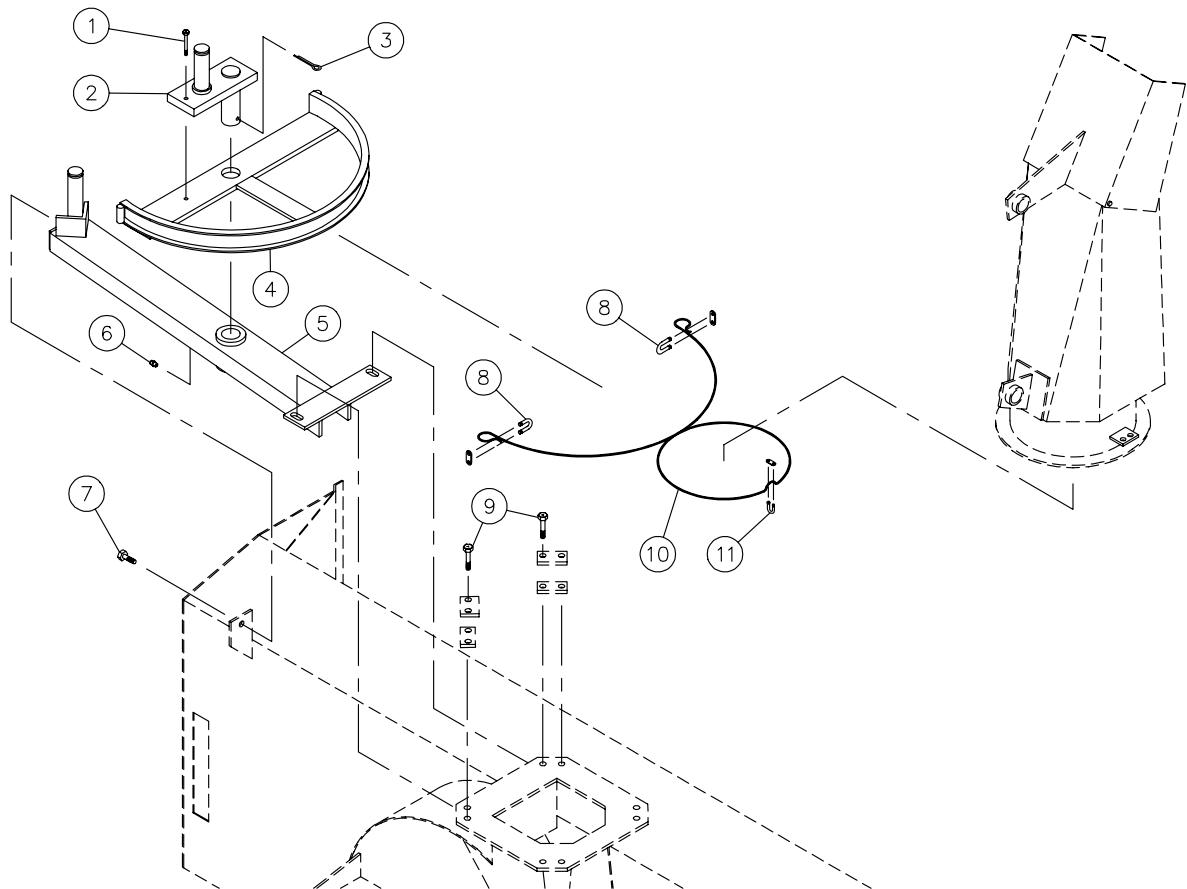


REF.	PART #	DESCRIPTION	QTY
1	Std.	Bolt 1/4" NC x 1 1/2" lg grade 5 + nylon locknut .....	1
2	110-04302	Pivot .....	1
3	Std.	Cotter pin 1/4" x 2" .....	1
4	110-02862	Arc .....	1
5	110-04291	Frame .....	1
6	Std.	Grease fitting 1/4"-28 straight .....	1
7	Std.	Bolt 3/8" NC x 1" lg + nylon locknut .....	1
8	6496	Cable clamp 3/16" .....	2
9	Std.	Bolt 3/8" NC x 1 3/4" lg + nylon locknut + flat washer .....	2
10	190-00531	Cable 3/16" x 72" lg .....	1
11	6303	Cable clamp 1/8" .....	1

# HYDRAULIC CHUTE KIT HU-74 AND HU-8494

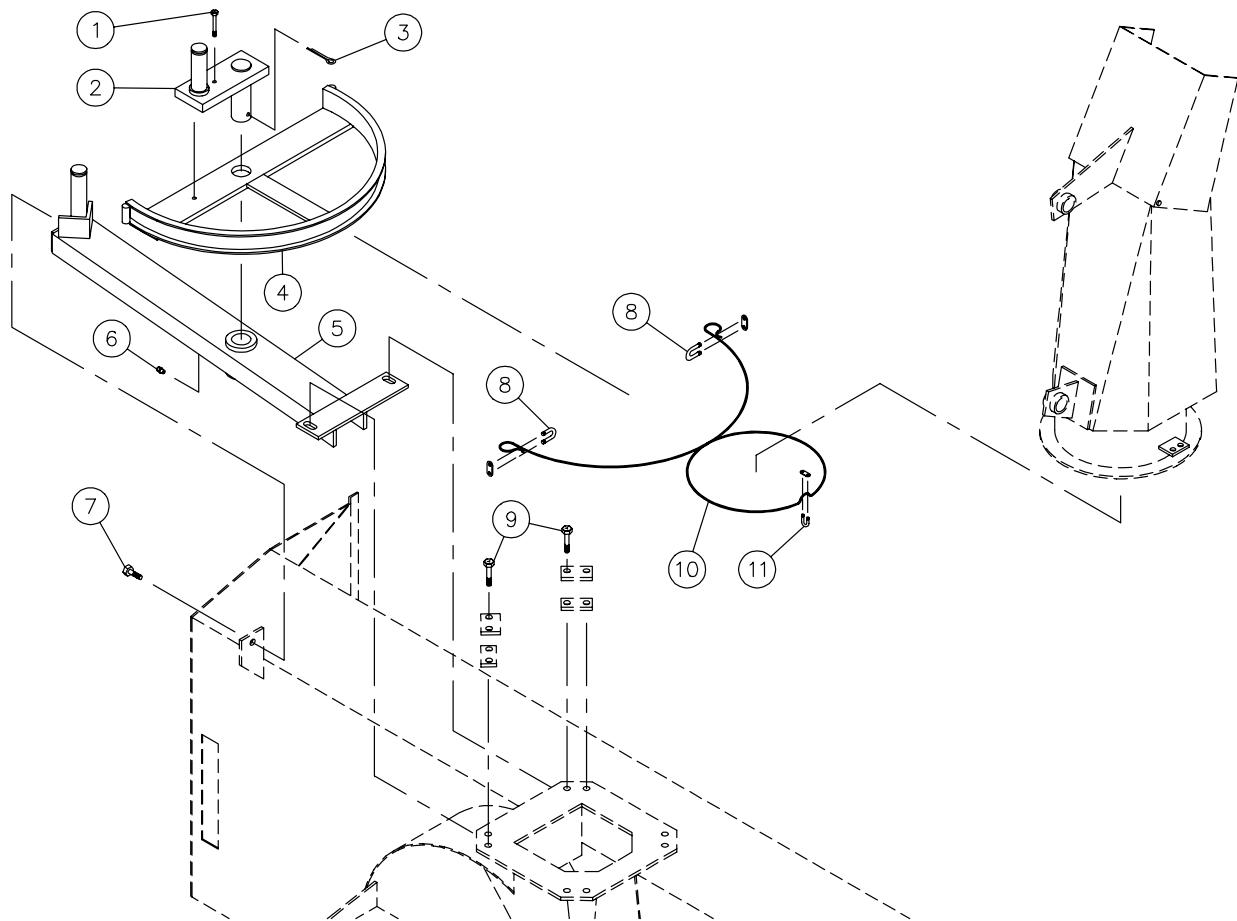


REF.	PART #	DESCRIPTION	QTY
1		Std. Bolt 1/4" NC x 1 3/4" lg grade 5 + nylon locknut .....	1 74
2	110-04152	Pivot .....	1 1
3		Std. Cotter pin 1/4" x 2" .....	1 1
4	110-03082	Arc .....	1 -
4	110-03232	Arc .....	- 1
5	110-04172	Frame .....	1 -
5	110-04162	Frame .....	- 1
6		Std. Grease fitting 1/4"-28 straight .....	1 1
7		Std. Bolt 3/8" NC x 1" lg + nylon locknut .....	1 1
8	6496	Cable clamp 3/16" .....	2 2
9		Std. Bolt 3/8" NC x 2" lg + nylon locknut & flat washer .....	2 -
9		Std. Bolt 7/16" NC x 2" lg + nylon locknut & flat washer .....	- 2
10	190-00541	Cable 3/16" x 85" lg .....	1 -
10	190-00571	Cable 3/16" x 96" lg .....	- 1
11	6303	Cable clamp 1/8" .....	1 1

## P.T.O. SHAFT # 6545 (T20)

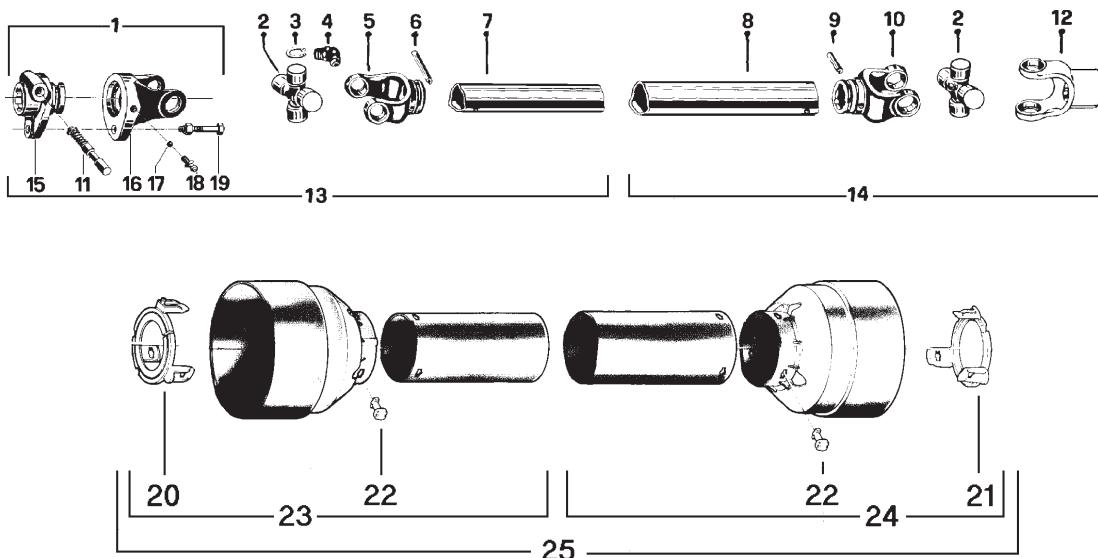


REF.	PART #	DESCRIPTION	QTY
1	6201	Quick disconnect yoke assembly .....	1
2	6208	U joint + 4 retaining ring + 1 grease fitting .....	2
3	6203	Retaining ring .....	8
4	8110	Grease fitting .....	2
5	6434	Yoke for inner tube .....	1
6	6433	Pin spring .....	1
7	6432	Inner tube .....	1
8	6431	Outer tube .....	1
9	6344	Pin spring .....	1
10	6430	Yoke for outer tube .....	1
11	8068-E	Yoke stopper 1 3/8" .....	1
12	6215	Yoke with round hole 1" .....	1
13	6224	P.T.O. section, side with safety shear bolt, inner part, without protector .....	1
14	6546	P.T.O. section, side without safety shear bolt, outer part, without protector .....	1
15	6202	Adaptor .....	1
16	6204	Yoke and shearplate .....	1
17	6205	Ball .....	17
18	6206	Grease fitting .....	1
19	6207	Safety shear bolt M6 x 40mm .....	1
20	6219-E	Bearing ring for inner guard tube .....	1
21	6218-E	Bearing ring for outer guard tube .....	1
22	8109	Stopper .....	6
23	6221	Inner shield .....	1
24	6220	Outer shield .....	1
25	6222	Complete shield .....	1

## P.T.O. SHAFT # 8114 (T50)

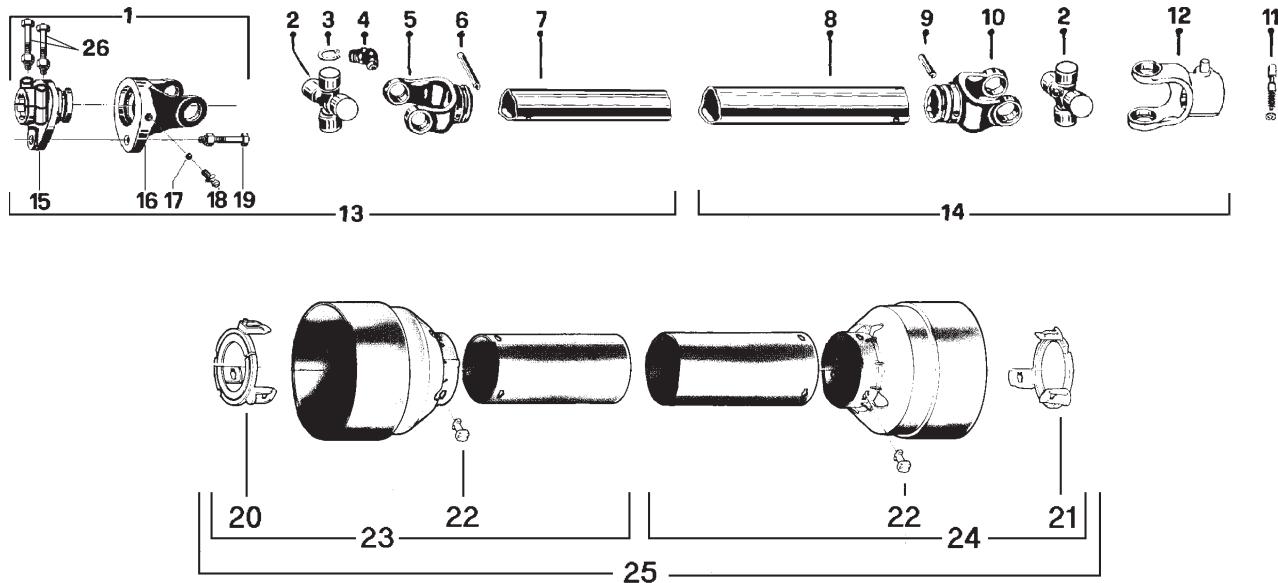


REF.	PART #	DESCRIPTION	QTY
1	8221	Safety shear yoke (2 bolts) .....	1
2	8073	U joint + 4 retaining ring + 1 grease fitting .....	2
3	8061	Retaining ring .....	8
4	8110	Grease fitting .....	2
5	8079	Yoke for inner tube .....	1
6	6341	Pin spring .....	1
7	8077	Inner tube .....	1
8	8076	Outer tube .....	1
9	8142	Pin spring .....	1
10	8074	Yoke for outer tube .....	1
11	8068-E	Yoke stopper 1 3/8" .....	1
12	8113	Yoke with hole 1 3/8"-6 splines + yoke stopper 1 3/8" .....	1
13	8235	P.T.O. section, side with safety shear bolt, inner part, without protector .....	1
14	8236	P.T.O. section, side without safety shear bolt, outer part, without protector .....	1
15	8223	Adaptor with 2 bolts .....	1
16	8069	Yoke and shearplate .....	1
17	8070	Ball .....	17
18	8071	Grease fitting .....	1
19	8072	Safety shear bolt M10 x 50mm .....	1
20	8084-E	Bearing ring for inner guard tube .....	1
21	8083-E	Bearing ring for outer guard tube .....	1
22	8109	Stopper .....	6
23	8086	Inner shield .....	1
24	8085	Outer shield .....	1
25	8087	Complete shield .....	1
26	8222	Bolt M12 x 70mm + lock nut .....	2

## P.T.O. SHAFT # 8202

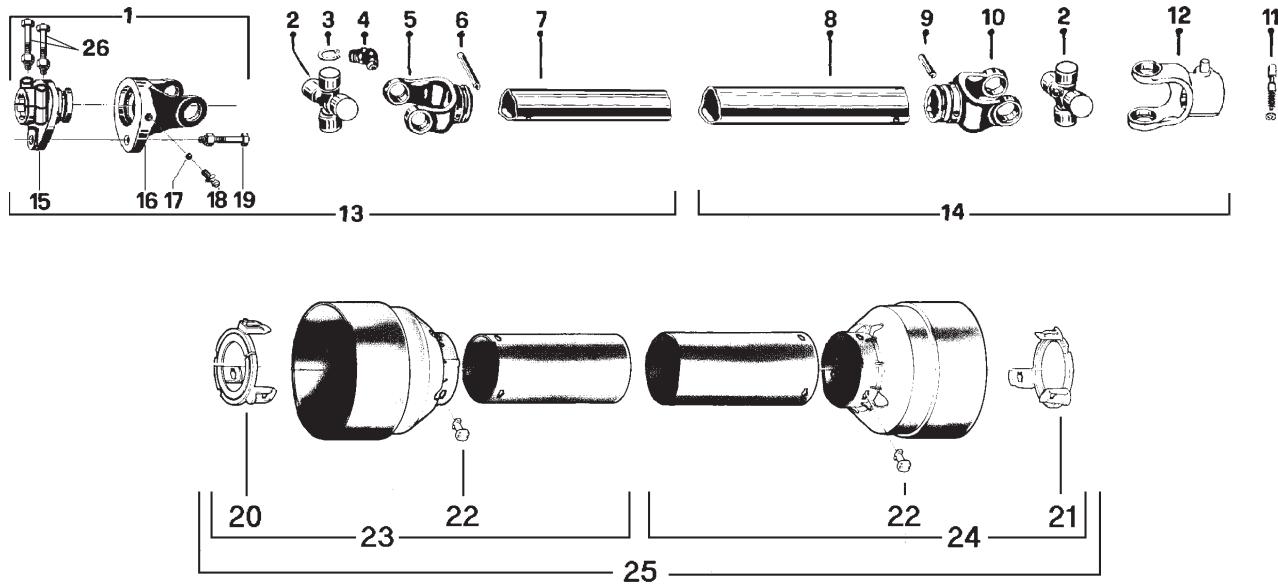


REF.	PART #	DESCRIPTION	QTY
1	8237	Safety shear yoke (2 bolts) .....	1
2	8238	U joint + 4 retaining ring + 1 grease fitting .....	2
3	8061	Retaining ring .....	8
4	8110	Grease fitting .....	2
5	8239	Yoke for inner tube .....	1
6	8075	Pin spring .....	1
7	8077	Inner tube .....	1
8	9212	Outer tube .....	1
9	9210-E	Pin spring .....	1
10	8240	Yoke for outer tube .....	1
11	8068-E	Yoke stopper 1 3/8" .....	1
12	8250	Yoke with hole 1 3/8"-6 splines + yoke stopper 1 3/8" .....	1
13	8241	P.T.O. section, side with safety shear bolt, inner part, without protector .....	1
14	8242	P.T.O. section, side without safety shear bolt, outer part, without protector .....	1
15	8243	Adaptor with 2 bolts .....	1
16	8244	Yoke and shearplate .....	1
17	9205	Ball .....	17
18	8071	Grease fitting .....	1
19	8218	Safety shear bolt M10 x 60mm .....	1
20	8245	Bearing ring for inner guard tube .....	1
21	8246	Bearing ring for outer guard tube .....	1
22	8109	Stopper .....	6
23	8247	Inner shield .....	1
24	8248	Outer shield .....	1
25	8249	Complete shield .....	1
26	8222	Bolt M12 x 70mm + lock nut .....	2

# GEAR BOX # 6550

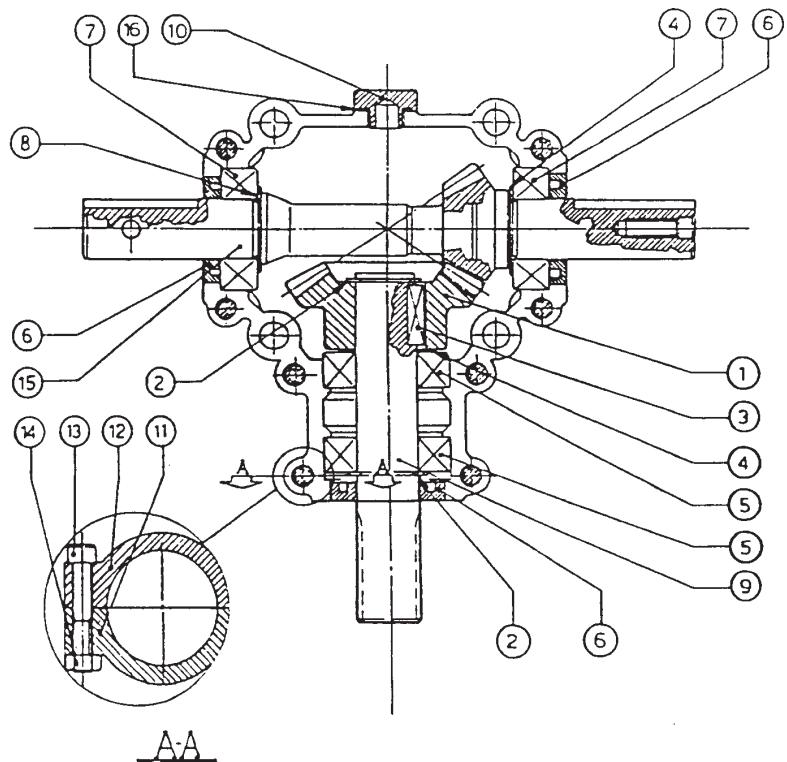


REF.	PART #	DESCRIPTION	QTY
1	6547	Gear Z24 .....	1
2	6548	Outside circlip .....	2
3	6549	Parallel key 8 x 7 x 25 .....	1
4	6562	Shim .....	2
5	6551	Bearing 6205 .....	2
6	6552	Oil seal .....	3
7	6553	Bearing .....	2
8	6554	Shim .....	1
9	6555	Side shaft (1") .....	1
10	6556	Plug 3/8" GAS .....	1
11	6557	Casing A .....	1
12	6558	Casing A .....	1
13	6559	Bolt M8 x 45 8,8 .....	8
14	6428	Hex. nut M8 8 .....	8
15	6560	Pinion shaft Z16 for impeller (1" & 1") .....	1
16	6425	O-ring OR-3062 .....	1

# GEAR BOX # 8251 (T27D)

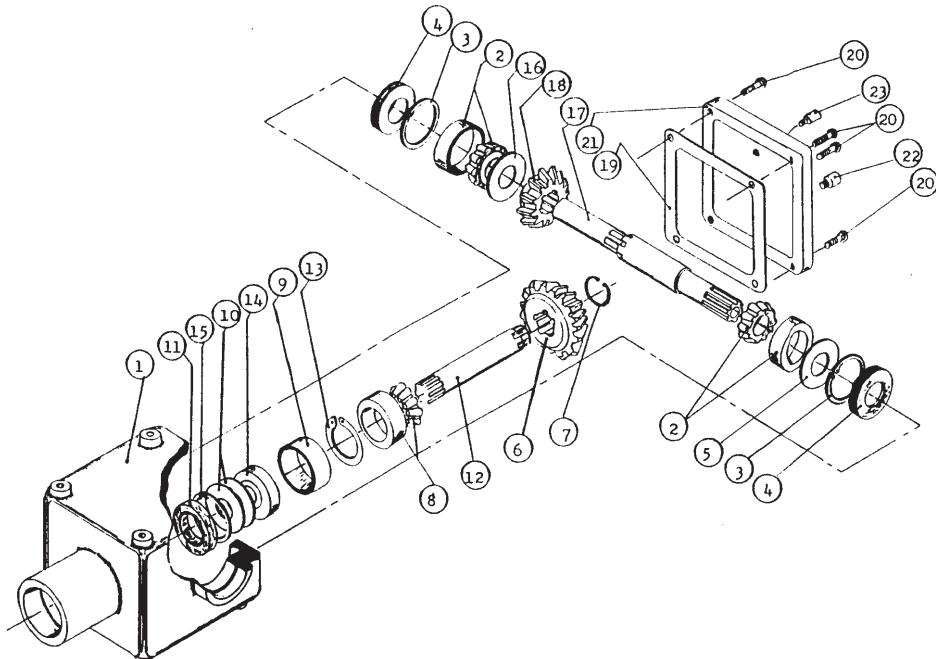

REF.	PART #	DESCRIPTION	QTY
1	8043	Casing .....	1
2	8044	Roller bearing no. 30208 .....	2
3	8045	Inside circlip 80mm .....	2
4	8046	Oil seal 40 x 80 x 12mm .....	2
5	8047	Adjusting washer .....	1
6	8048	Gear Z18 .....	1
7	8049	Outside circlip 40mm .....	1
8	8050	Roller bearing no. 30207 .....	1
9	8051	Spacer ring .....	1
10	8052	Adjusting washer .....	2
11	8053	Oil seal 35 x 72 x 12mm .....	1
12	8054	Side shaft (1 1/4" - 19 splines) .....	1
13	8055	Outside circlip 35mm .....	1
14	8056	Ball bearing no. 6207 .....	1
15	8057	Inside circlip 72mm .....	1
16	8058	Adjusting washer .....	1
17	8252	Impeller shaft (1 1/2" & 1 3/8" - 6 splines) .....	1
18	8060	Gear Z-18 .....	1
19	8061	Gasket .....	1
20	8062	Bolt M10 x 14mm .....	4
21	8063	Cover .....	1
22	8064	Oil plug .....	1
23	8065	Oil filler plug .....	1


# CYLINDER 25TR04

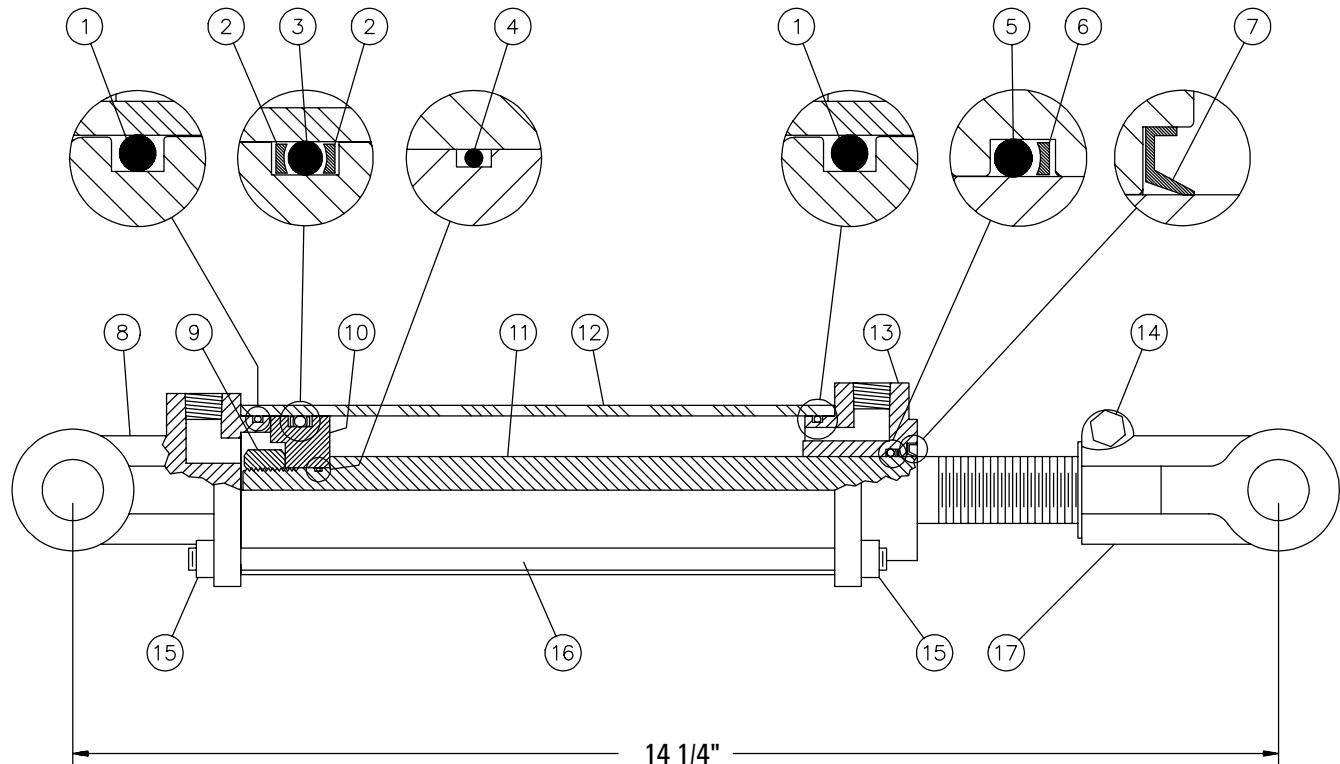

REF.	PART #	DESCRIPTION	QTY
1	See #RK25TR	O-ring 1/8" x 2 1/4" x 2 1/2" .....	2
2	See #RK25TR	Back-up 2 1/2" o.d. x 3/16" Ø .....	2
3	See #RK25TR	O-ring 3/16" x 2 1/8" x 2 1/2" .....	1
4	See #RK25TR	O-ring 1/16" x 5/8" x 3/4" .....	1
5	See #RK25TR	O-ring 1/8" x 1 1/8" x 1 3/8" .....	1
6	See #RK25TR	Back-up 1 3/8" o.d. x 1/8" Ø .....	1
7	See #RK25TR	Wiper 1 1/8" i.d. x 1 5/8" o.d. .....	1
8	492401	Yoke (for 2 1/2" tube) .....	1
9	Std.	Nut 3/4" NF .....	1
10	4924-31	Piston 2 1/2" Ø .....	1
11	491980-04	Piston rod 1 1/8" .....	1
12	491668-04	Cylinder body 2 1/2" Ø .....	1
13	492421	Head (for 2 1/2" tube) .....	1
14	Std.	Bolt 3/8" NC x 2 1/4" + nut .....	1
15	Std.	Nut 3/8" NC .....	8
16	Std.	Threaded rod 3/8" NC x 8" lg .....	4
17	458599	Yoke (for 1 1/8" rod) .....	1
NI*	8183	Pin 1" Ø + cotter pin .....	2
NI*	RK25TR	Repair kit for cylinder 2 1/2" (includes # 1, 2, 3, 4, 5, 6, & 7) .....	1

\*NI = NOT ILLUSTRATED

# CYLINDER 25TR08

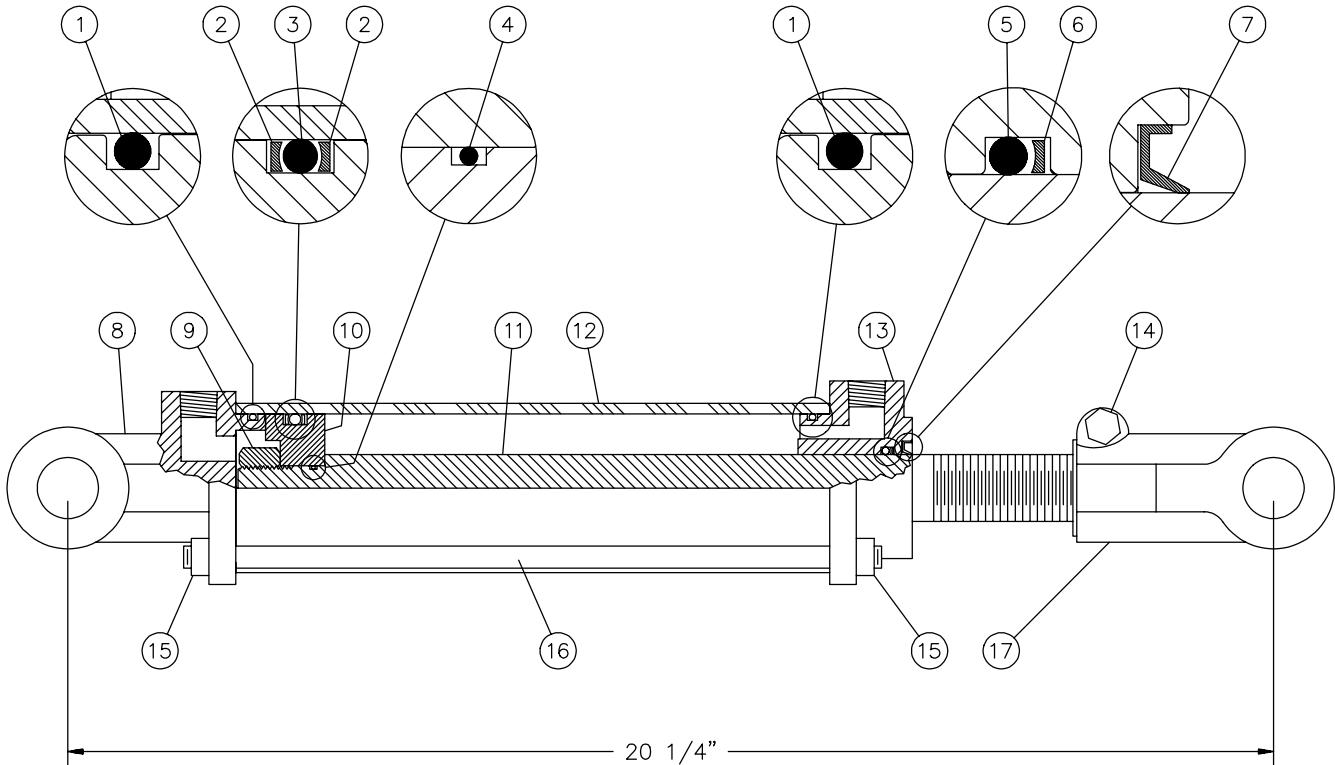

REF.	PART #	DESCRIPTION	QTY
1	See #RK25TR	O-ring 1/8" x 2 1/4" x 2 1/2" .....	2
2	See #RK25TR	Back-up 2 1/2" o.d. x 3/16 ø .....	2
3	See #RK25TR	O-ring 3/16" x 2 1/8" x 2 1/2" .....	1
4	See #RK25TR	O-ring 1/16" x 5/8" x 3/4" .....	1
5	See #RK25TR	O-ring 1/8" x 1 1/8" x 1 3/8" .....	1
6	See #RK25TR	Back-up 1 3/8" o.d. x 1/8" ø .....	1
7	See #RK25TR	Wiper 1 1/8" i.d. x 1 5/8" o.d. .....	1
8	492401	Yoke (for 2 1/2" tube) .....	1
9	Std.	Nut 3/4" NF .....	1
10	4924-31	Piston 2 1/2" ø .....	1
11	491980	Piston rod 1 1/8" .....	1
12	491668	Cylinder body 2 1/2" ø .....	1
13	492421	Head (for 2 1/2" tube) .....	1
14	Std.	Bolt 3/8" NC x 2 1/4" + nut .....	1
15	Std.	Nut 3/8" NC .....	8
16	Std.	Threaded rod 3/8" NC x 12" lg .....	4
17	458599	Yoke (for 1 1/8" rod) .....	1
NI*	8183	Pin 1" ø + cotter pin .....	2
NI*	RK25TR	Repair kit for cylinder 2 1/2" (includes # 1, 2, 3, 4, 5, 6, & 7) .....	1

\*NI = NOT ILLUSTRATED

# TORQUE CHART

TORQUE SPECIFICATION TABLE

Thread UNC and UNF		Grade 2				Grade 5				Grade 8*			
Bolt size		Torque				Torque				Torque			
Inches	mm	Pound feet min.	Pound feet max.	Newton meters min.	Newton meters max.	Pound feet min.	Pound feet max.	Newton meters min.	Newton meters max.	Pound feet min.	Pound feet max.	Newton meters min.	Newton meters max.
1/4	6.35	5	6	6.8	8.13	9	11	12.2	14.9	12	15	16.3	30.3
5/16	7.94	10	12	13.6	16.3	17	20.5	23.1	27.8	24	29	32.5	39.3
3/8	9.53	20	23	27.1	31.2	35	42	47.5	57.0	45	54	61.0	73.2
7/16	11.11	30	35	40.7	47.4	54	64	73.2	86.8	70	84	94.9	113.9
1/2	12.70	45	52	61.0	70.5	80	96	108.5	130.2	110	132	149.2	179.0
9/16	14.29	65	75	88.1	101.6	110	132	149.2	179.0	160	192	217.0	260.4
5/8	15.88	95	105	128.7	142.3	150	180	203.4	244.1	220	264	298.3	358.0
3/4	19.05	150	185	203.3	250.7	270	324	366.1	439.3	380	456	515.3	618.3
7/8	22.23	160	200	216.8	271.0	400	480	542.4	650.9	600	720	813.6	976.3
1	25.40	250	300	338.8	406.5	580	696	786.5	943.8	900	1080	1220.4	1464.5
1 1/8	25.58	-	-	-	-	800	880	1084.8	1193.3	1280	1440	1735.7	1952.6
1 1/4	31.75	-	-	-	-	1120	1240	1518.7	1681.4	1820	2000	2467.9	2712.0
1 3/8	34.93	-	-	-	-	1460	1680	1979.8	2278.1	2380	2720	3227.3	3688.3
1 1/2	38.10	-	-	-	-	1940	2200	2630.6	2983.2	3160	3560	4285.0	4827.4

\* Thick nuts must be used with grade 8 bolts.

Size of screw	Thread	Pitch (mm)	Grade 4T				Grade 7T				Grade 8T			
			Torque				Torque				Torque			
			Pound feet min.	Pound feet max.	Newton meters min.	Newton meters max.	Pound feet min.	Pound feet max.	Newton meters min.	Newton meters max.	Pound feet min.	Pound feet max.	Newton meters min.	Newton meters max.
M6	UNC	1.00	3.6	5.8	4.9	7.9	5.8	9.4	7.9	12.7	7.2	10	9.8	13.6
M8	UNC	1.25	7.2	14	9.8	19	17	22	23	29.8	20	26	27.1	35.2
M10	UNC	1.5	20	25	27.1	33.9	34	40	46.1	54.2	38	46	51.5	62.3
M12	UNC	1.75	28	34	37.9	46.1	51	59	69.1	79.9	57	66	77.2	89.4
M14	UNC	2.0	49	56	66.4	75.9	81	93	109.8	126	96	109	130.1	147.7
M16	UNC	2.0	67	77	90.8	104.3	116	130	157.2	176.2	129	145	174.8	196.5
M18	UNC	2.0	88	100	119.2	136	150	168	203.3	227.6	175	194	237.1	262.9
M20	UNC	2.5	108	130	146.3	176.2	186	205	252	277.8	213	249	288.6	337.4
M8	UNF	1.0	12	17	16.3	23	19	27	25.7	36.6	22	31	29.8	42
M10	UNF	1.25	20	29	27.1	39.3	35	47	47.4	63.7	40	52	54.2	70.5
M12	UNF	1.25	31	41	42	55.6	56	68	75.9	92.1	62	75	84	101.6
M14	UNF	1.5	52	64	70.5	86.7	90	106	122	143.6	107	124	145	168
M16	UNF	1.5	69	83	93.5	112.5	120	138	162.6	187	140	158	189.7	214.1
M18	UNF	1.5	100	117	136	158.5	177	199	239.8	269.6	202	231	273.7	313
M20	UNF	1.5	132	150	178.9	203.3	206	242	279.1	327.9	246	289	333.3	391.6

Use the above torques when special torque is not given.

NOTE: These values apply to fasteners as received from supplier, dry, or when lubricated with normal engine oil. They do not apply if extreme pressure lubricants are used.

---

---

## **WARRANTY**

---

PRONOVEST warrants this product to the initial purchaser for the period of one year from the date of purchase against defects in materials and workmanship.

We will replace or repair defective parts free of charge if they are returned to our plant in St-Tite, Quebec, Canada.

Transportation charges are the responsibility of the customer. This warranty is not transferable.

Hydraulic cylinders are covered by the manufacturer of these items.

All PRONOVEST spare parts purchased are covered by a three (3) month warranty.

This warranty becomes void and null if the equipment is modified, breaks down as the result of an accident, is not operated according to manufacturer's recommendations, damaged by negligence or if maintenance has not been carried out as specified.

Our obligation is limited to the replacement or repair of the defective part. PRONOVEST accepts no responsibility for direct or indirect consequential damages of any kind.







Ce manuel est aussi disponible en français.  
Veuillez téléphoner.



**LES MACHINERIES PRONOVOOST INC.**  
260, route 159,  
Saint-Tite, Quebec, Canada, G0X 3H0  
Tel.: (418) 365-7551, Fax: (418) 365-7954