

MASTER LANDWHEEL TYRES


Check that tyres have the correct pressure - 1.5 bar (22 p.s.i.)

METERING UNITS

Check that the correct belts, base, and chokes are fitted for the seed type and spacing required. (See seed belt, spring base and choke selection chart - Section 5). Ensure they are all fitted correctly as per the instructions on Metering Unit - Section 2.

DRIVE SETTING

MASTER LANDWHEEL DRIVE

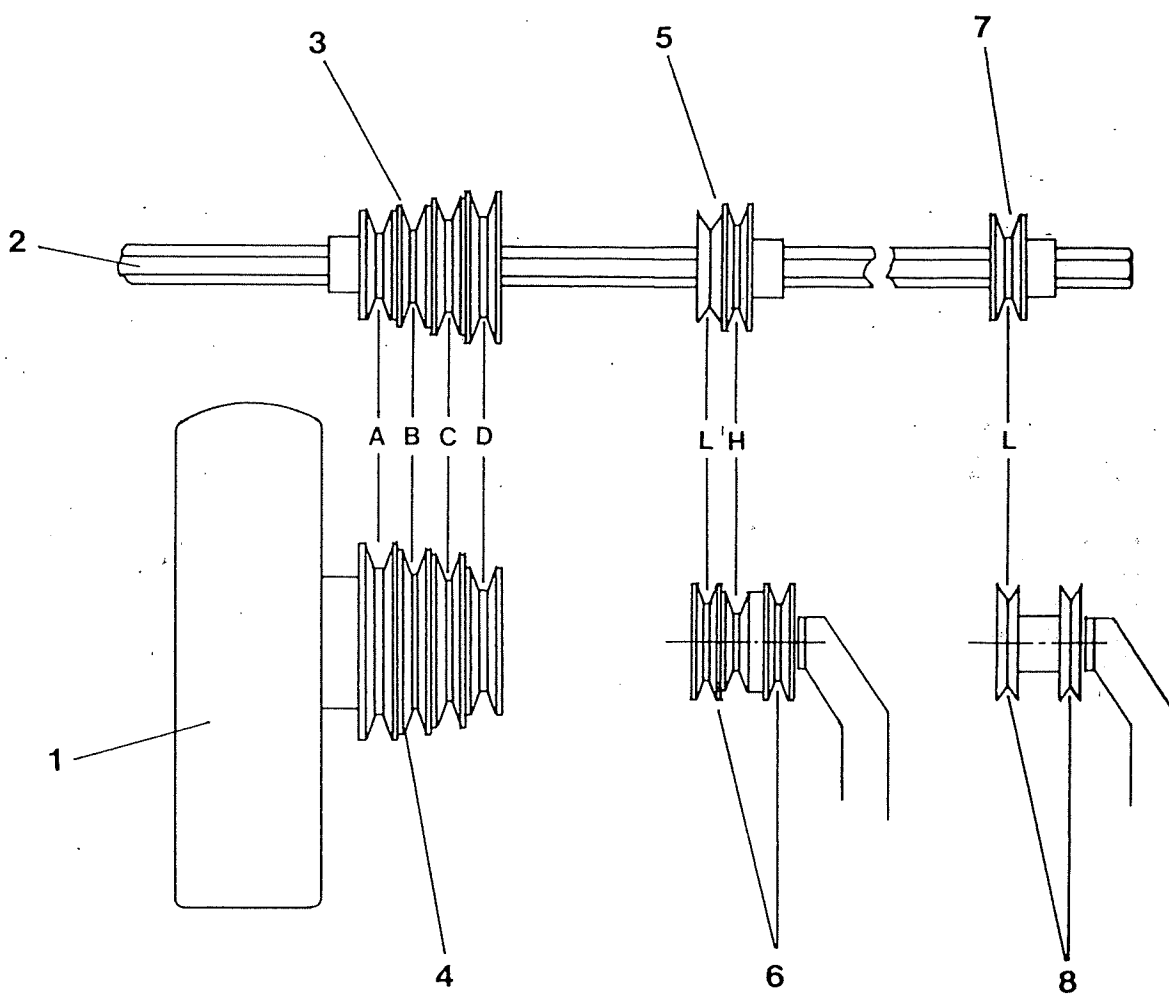

1. Determine seed spacing required — see Chart to convert seed stations per foot to seed spacing in inches.
2. Determine seed belt required & no. of holes in belt.

Stations per foot	Spacing inches	Holes in Belt	Seed Spacing (inches)						
			0.5	0.63	0.75	0.78	0.94	1.0	1.25
1	12.00	144	0.5	0.63	0.75	0.78	0.94	1.0	1.25
2	6.00	120	0.59	0.75	0.9	0.94	1.1	1.2	1.5
3	4.00	112	0.66	0.8	0.97	1.0	1.2	1.3	1.6
4	3.00	96	0.75	0.94	1.1	1.2	1.4	1.5	1.9
5	2.40	90	0.80	1.0	1.2	1.25	1.5	1.6	2.0
6	2.00	72	1.0	1.25	1.5	1.6	1.9	2.0	2.5
7	1.71	60	1.2	1.5	1.8	1.9	2.25	2.4	3.0
8	1.50	56	1.3	1.6	1.9	2.0	2.4	2.6	3.2
9	1.33	48	1.5	1.9	2.25	2.3	2.8	3.0	3.75
10	1.20	45	1.6	2.0	2.4	2.5	3.0	3.2	4.0
11	1.09	40	1.8	2.25	2.7	2.8	3.4	3.6	4.5
12	1.00	36	2.0	2.5	3.0	3.1	3.75	4.0	5.0
13	0.92	32	2.25	2.8	3.4	3.5	4.2	4.5	5.6
14	0.85	30	2.4	3.0	3.6	3.75	4.5	4.8	6.0
15	0.80	28	2.6	3.2	3.9	4.0	4.8	5.1	6.4
16	0.75	24	3.0	3.75	4.5	4.7	5.6	6.0	7.5
17	0.71	20	3.6	4.5	5.4	5.6	6.75	7.2	9.0
18	0.66	18	4.0	5.0	6.0	6.25	7.5	8.0	10.0
19	0.63	16	4.5	5.6	6.75	7.0	8.4	9.0	11.3
20	0.60	15	4.8	6.0	7.2	7.5	9.0	9.6	12.0
		14	5.1	6.4	7.7	8.0	9.6	10.3	12.9
		12	6.0	7.5	9.0	9.4	11.3	12.0	15.0
		10	7.2	9.0	10.8	11.3	13.5	14.4	18.0
		9	8.0	10.0	12.0	12.5	15.0	16.0	20.0
		8	9.0	11.2	13.5	14.0	16.8	18.0	22.5
		6	12.0	15.0	18.0	18.8	22.5	24.0	30.0
		5	14.4	18.0	21.6	22.5	27.0	28.8	36.0
		4	18.0	22.4	27.0	28.0	33.8	36.0	45.0
		1 Rev.	72	90	108	112.5	135	144	180
			AH	AL *	CH	BL *	CL *	DH	DL *
DRIVE									